

Xbox Support

Xbox One

Getting started

Accessories

Apps

Console

Ease of Access

Family

Networking

OneGuide and Live TV

Social

Store

Warranty and service

Xbox 360

Xbox on Windows 10

Games

Billing

My account

 
Legacy devices

Get to know your Xbox One Wireless Controller







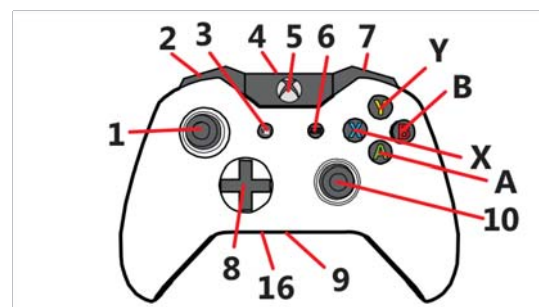


 


The top and face of the wireless controller






 
Original Xbox One Wireless Controller




Xbox One Wireless Controller


1 Left stick 	9 Expansion port
2 Left bumper 	10 Right stick 
3 View button 	16 3.5-mm port
4 USB charge port	X X button 
5 Xbox button 	Y Y button 
6 Menu button 	A A button 
7 Right bumper 	B B button 
8 Directional pad (D-pad) 	

Left stick  (1) and right stick  (10): These are small joysticks, raised above the controller surface, with concaved rubbery pads. The left stick resides on the lower left of the front face of the controller, and the right stick resides on the lower right of the front face. The sticks are used to interact with games, apps, and the Xbox One interface. These move directionally, and they can also function as clickable buttons when you press down on them.

Left bumper  (2) and right bumper  (7): These are oblong-shaped pressable controls that reside on the top of the controller to the left and right of the USB charging port. These controls are used to interact with games, apps, and the Xbox One interface. They are often used as accelerators to jump between sections of the UI but have varied functionality depending on the game.


View button  (3): This button resides just to the lower left of the Xbox button (around 7 o'clock). Use this button to focus in on an activity in a game or app, such as pulling up a map during a role-playing game or accessing the address bar in Internet Explorer. The functions of this button vary depending on the app or game.


USB charge port (4): This port resides on the top edge of the controller above the Xbox button. It's a recessed mini USB port, which connects your wireless controller to the console using a mini USB cable. For more information, see [About the Xbox One Play & Charge Kit](#).

Xbox button  (5): This button resides at the top front face of the controller (12 o'clock position). It is slightly recessed and round. It has multiple functions:

- When the controller or console is turned off, hold this button to turn on the console. If the console is already on and the controller is off, hold this button to turn on the controller.





- When the controller and console are already on, hold this button to turn off the console.
- When the controller and console are already on, press and hold this button until it rumbles and from there you can turn on Narrator or magnifier. See [Turn on Narrator on Xbox One](#) for more info.
- When using the console, press this button once to open the guide.
- When using the controller with a Windows 10 device, this button opens the Game bar when pressed during PC gameplay. Exception: During game streaming through the Xbox App for Windows 10, pressing this button returns you to the Home screen of the Xbox App for Windows 10.

Menu button  (6): This button resides just to the lower right of the Xbox button (around 5 o'clock). Use this button to access game and app menu options like Settings or Help, along with commands within the user interface such as Enter on a keyboard.

 
Directional pad (D-pad)  (8): This is a raised plus sign-shaped toggle that resides between the left and right thumb sticks. It moves the focus up, down, right, and left in the UI. Used to interact with games, apps, and the Xbox One interface.

Expansion port (9): This is a recessed port that resides on the bottom-side edge of the controller. It's used to connect other accessories, such as an Xbox One Chat Headset.


3.5-mm port (16): This is a recessed port next to the expansion port on the bottom-side edge of the controller. Used to connect compatible 3.5-mm audio devices. Only available on controllers released after June 2015.

A , B , X , Y  buttons: These buttons sit on the right side of the controller. The Y button sits in 12 o'clock position, with B, A, and X positioned clockwise. Used to interact with games, apps, and the Xbox One interface.



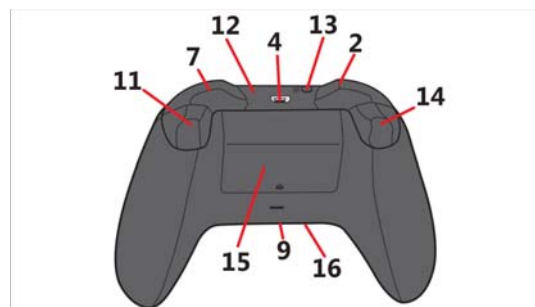

 The bottom and back of the wireless controller

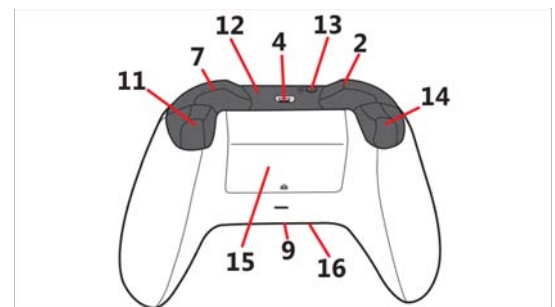
 


Original Xbox One Wireless Controller



Xbox One Wireless Controller

2 Left bumper 	12 IR window
4 USB charge port	13 Wireless enrollment button
7 Right bumper 	14 Left trigger 
9 Expansion port	15 Battery cover
11 Right trigger 	16 3.5-mm port

Left bumper  (2) and right bumper  (7): These are oblong-shaped pressable controls that reside on the top of the controller to the left and right of the USB charging port. These controls are used to interact with games, apps, and the Xbox One interface. They are often used as accelerators to jump between sections of the UI but have varied functionality depending on the game.



USB charge port (4): This port resides on the top edge of the controller above the Xbox button. It's a recessed mini USB port, which connects your wireless controller to the console using a mini USB cable. For more information, see [About the Xbox One Play & Charge Kit](#).

Expansion port (9): This is a recessed port that resides on the bottom-side edge of the controller. It's used to connect other accessories, such as an Xbox One Chat Headset.

Infrared (IR) window (12): Hidden behind the "smoked" plastic next to the USB port are infrared LEDs used for auto-pairing users to the controller via the Kinect sensor. To learn more about this feature, see [How to assign an account to an Xbox One Wireless Controller](#).

Wireless enrollment button (13): This small, slightly raised button resides just to the left of the USB port on the top edge of the controller. Used to wirelessly connect the controller to a console and to enroll in Bluetooth pairing on a Windows 10 PC. For more information, see [Connect a wireless Xbox One controller](#)

to your console.

Right trigger  (11) and left trigger  (14): Positioned just below the bumpers on the front-top edge of the controller. These are pressable controls most commonly used during gameplay. They often vibrate to provide feedback during the games, though you can turn off vibration in the controller settings.

Battery compartment cover (15): Sits on the middle back of the controller.

3.5-mm port (16): This is a recessed port next to the expansion port on the bottom-side edge of the controller. Used to connect compatible 3.5-mm audio devices. Only available on controllers released after June 2015.

Related Issues

[Using AA batteries in your Xbox One Wireless Controller](#)

[Using rechargeable batteries in your Xbox One Wireless Controller](#)

[Standard Xbox One Wireless Controller overview](#)

[All about the Xbox Elite Wireless Controller](#)

[Using Xbox One Wireless Controllers on a PC](#)

[Back to top](#)

Was this article helpful?

Yes

No

Support Resources



Error & Status
Code Search



Repair and service
centre



Manuals and
warranty info



Post on the
Community
Support Forums



Contact Us

Share this page



Xbox

Feedback

Support

Photosensitive Seizure Warning

Code of Conduct

Fans

Xbox Wire


Jobs


For Developers

Games

ID@Xbox

 Windows 10



 English (United Kingdom)

[Contact us](#)

[Privacy & Cookies](#)

[Terms of use](#)

[Trademarks](#)

[About our ads](#)

© 2017 Microsoft