



J1 PIN1 AND 2 IS THE JTAG TOOL REFERENCE VOLTAGE USUALLY 3.3V
 J1 PIN3 IS THE TRST ON CPU
 J1 PIN5 IS TDI ON THE CPU
 J1 PIN7 IS TMS ON THE CPU
 J1 PIN9 IS THE TCLK ON THE CPU
 J1 PIN11 IS JTAG MOD ON THE CPU SINCE WE DO NOT HAVE RETURN CLOCK J6 WILL BE OPEN.
 J1 PIN13 IS JTAG TDO ON THE CPU
 J1 PIN15 IS JTAG nTRST ON THE CPU

| | | |
|--------------------------------|----------------------------|--------------|
| Title | | |
| SABRE LITE JTAG ADAPTOR | | |
| Size | Document Number | Rev |
| Custom | BOUNDARY DEVICES | <Rev Co |
| Date: | Monday, September 17, 2012 | Sheet 1 of 1 |