



CONFIG 5V

Forces OFF the power supply to USB port when the USB port is in HOST mode (board powered from external power supply)

VBUSPO - Vbus Polarity Off
 D: The UOTGVBOF output signal is in its default mode (active high)
 1: The UOTGVBOF output signal is inverted (active low)

PRIMA COSA DA TOGLIERE SE MANCA SPAZIO

PRIMA COSA DA TOGLIERE SE MANCA SPAZIO