

Model Number


OMH-RL2-S


Protective Shroud Bracket with 360° Rotating Half-Clamp


Features

- Mounting bracket
- · Adjustable Bracket
- Protective functions

Dimensions

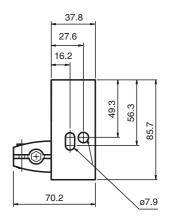

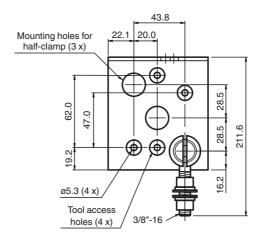

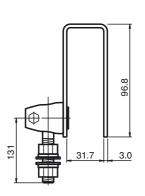

Technical data

Mechanical specifications

Material

Stainless steel shroud, nickel-plated zinc half-clamp, xinc-plated steel screws and nuts

Instructions

Model OMH-RL2-S is a protective shroud bracket for Series 28 and Series 29 photoelectric sensors.

This model includes the following components (as shown in Figure 1, starting at the upper left and going clockwise).

Half-clamp

Mounting bolt with two nuts, two flat washers, and one lock washer Metal sensor shroud

Two screws, two nuts, and two washers to mount sensor to shroud



Figure 1

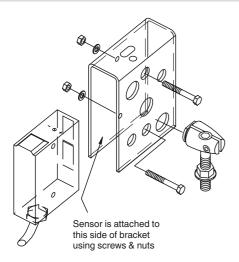


Figure 2

(1.) To assemble, the sensor must be mounted inside the sensor shroud.

Align the sensitivity adjustment poteniometer(s) of the sensor to the holes in the top of the shroud, as shown in Figure 3.

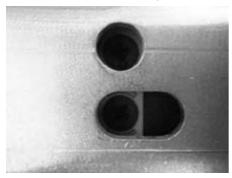


Figure 3

(2.) Slide the two screws through the shroud and sensor with the two washers and two nuts on the outside of the shroud. Tighten the screws in place so the sensor is securely mounted inside the shroud, as shown in Figures 4 and 5.



Figure 4



(3.) Loosen the half-clamp and observe the grooved slot inside. Place the head of







Figure 6

(4.) Without tightening the half-clamp over the bolt head, squeeze the half-clamp together so the smaller protrusion at the end fits together, and place it into one of the three larger holes on the side of the shroud as shown in Figure 7 and 8.

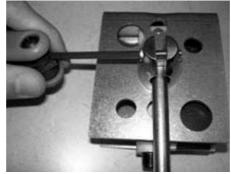


Figure 7



Figure 8

(5.) Position and align the mounting bracket as desired, then tighten the half-clamp set screw to secure the assembly as shown in Figure 9.



The OMH-RL2-S and attached sensor are now ready for installation as shown in



Figure 10