


Crimp Tool Kit



**Application Tooling
Specification Sheet**

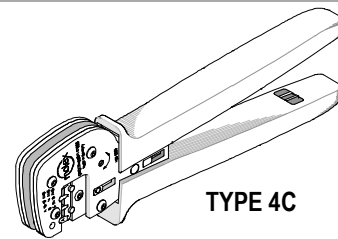

TYPE 4C

**Hand Crimp Tool
Order No. 64003-1500**

FEATURES

- % A full cycle ratcheting hand tool ensures complete crimps
- % Ergonomically designed soft handles
- % Precisely designed crimping profiles with simple contact positioning
- % Easy handling due to outstanding force ratio
- Tool kits are easily installed into the Hand Crimp Tool or the 63816-0300 Power Crimp Head which is installed into the 63816-0200 (110 V) or the 63816-0250 (220 V) Battery Powered Tool.
- Many different Tool kits can be used with a single Battery Powered Tool.

SCOPE

Products: Krimptite™ High Temperature Female Non-Insulated Steel Quick Disconnects, 10-12 AWG.

Testing

Mechanical

The tensile test or pull test is a means of evaluating the mechanical properties of the crimped connections. The following chart shows the UL specifications for various wire sizes. The tensile strength is shown in pounds and indicates the minimum acceptable force to break or separate the terminal from the conductor.

| Wire Size (AWG) | *UL - 310 |
|-----------------|-----------|
| 12 | 70 |
| 10 | 80 |


*UL – 310 – Quick Disconnects

CONDITIONS:

The following is a partial list of the product part numbers and their specifications that this tool is designed to crimp. We will be adding to this list and an up to date copy is available on www.molex.com.

| Wire Size: 10 – 12 AWG 5.00 – 3.30 mm ² | | | | | |
|--|-------------------------|-------------------|------|-----------------------------|-----|
| Terminal No. | Terminal Eng. No. (REF) | Wire Strip Length | | Insulation Diameter Maximum | |
| | | In. | mm | In. | mm |
| 192030379 | 192030379 | .25 | 6.35 | N/A | N/A |
| 192030468 | 192030468 | .25 | 6.35 | N/A | N/A |


DEFINITION OF TERMS

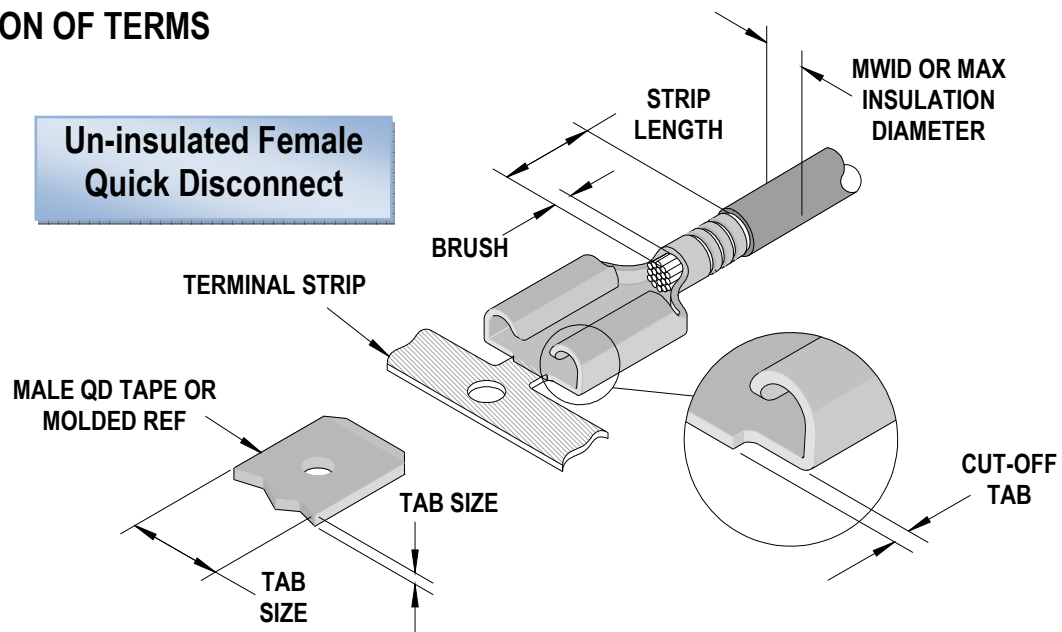

CAUTION: Install only Molex terminals listed above with this tool. Do not crimp hardened objects as damage can occur to the tool or die.

INSTALLATION

To install the Tool Kit into the Power Crimp Head follow the steps below:

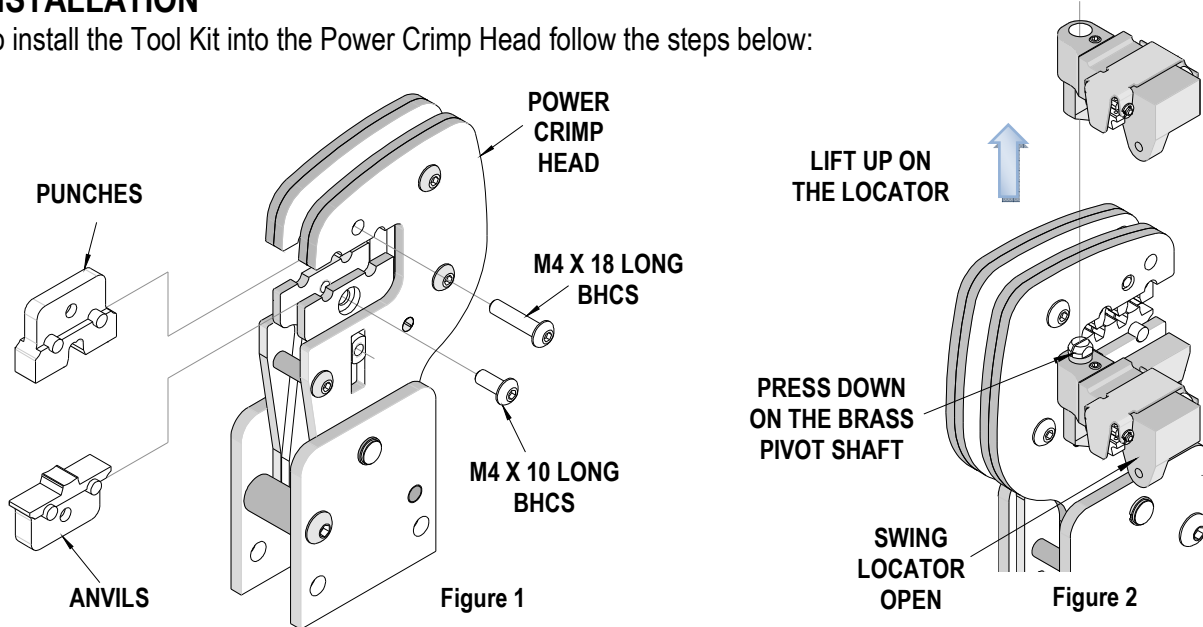

Anvils and Punches Installation

1. Insert the Anvils into the bottom slots of the nest. Install the M4 x 10 long BHCS and tighten in place.
2. Insert the Punches into the top slots of the nest. Install the M4 x 18 long BHCS and tighten in place. See Figure 1.

Locator Installation and Removal

Follow the steps below to install or replace the locator. See Figure 2.

To install the locator

1. Position the locator with the hole over the brass pivot shaft and snap it into place.

To remove the locator

1. Open the crimp hand tool.
2. Swing the existing locator open and away from the hand tool.
3. Firmly press down on the brass pivot shaft with your thumb, while pulling the locator up. Slip the locator off the top of the brass pivot shaft.

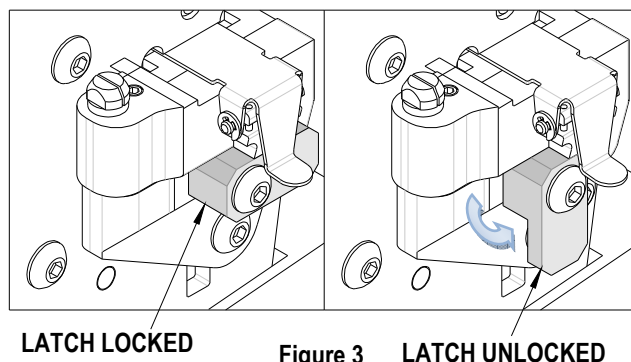


Figure 3 LATCH UNLOCKED

OPERATION

Open the tool by squeezing the handles together, at the end of the closing stroke, the ratchet mechanism will release the handles, and the hand tool will spring open.

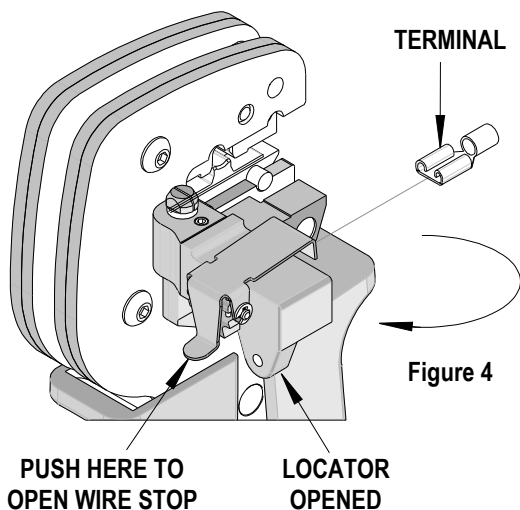


Figure 4

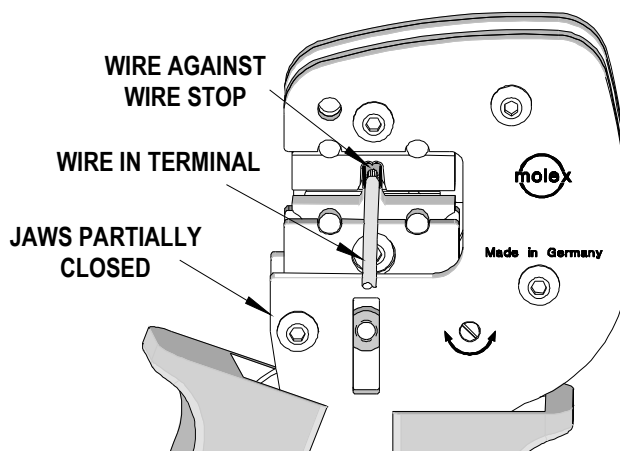


Figure 5

Crimping Terminals

1. Select the desired terminal listed in the preceding chart.
2. Turn the Locator Lock Latch down to unlock. See Figure 3.
3. Swing the terminal locator away from the crimp tool. The terminal must then be loaded into the locator by pressing down on the wire stop as shown in Figure 4.
4. Return the locator to its original position.
5. Turn the Locator Lock Latch up to lock. Make sure that the terminal is visually centered over the punch.
6. Insert the proper wire into the terminal.
7. Gently touch the wire stop with the end of the wire. See Figure 5 and 6.

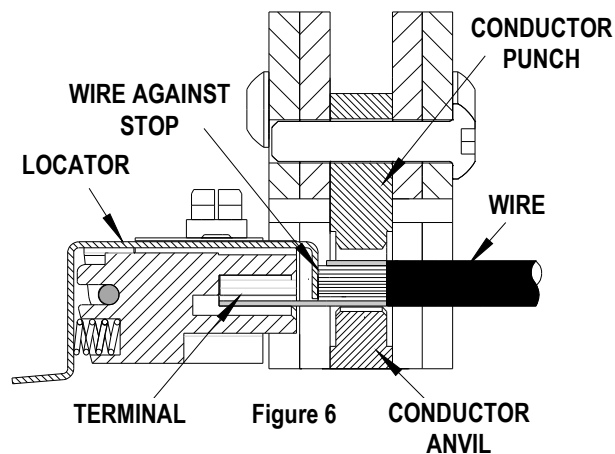



Figure 6

8. Compress the terminal by squeezing the tool handles until the ratchet mechanism cycle has been completed. Release the handles to open the jaws.
9. Remove the crimped terminal from the terminal locator by pressing down on the wire stop and gently pulling on the wire. The terminal locator can be in either position.
10. Visually inspect the crimped terminal for proper crimp location.

Note: The tamper proof ratchet action will not release the tool until it has been fully closed.

For the Battery Power Tool:

1. Cycle the Battery Power Tool to crimp the terminal to the wire.
2. Remove the crimped terminal from the terminal locator by pressing down on the wire stop and gently pulling on the wire. The terminal locator can be in either position.
3. Visually inspect the crimped terminal for proper crimp location.

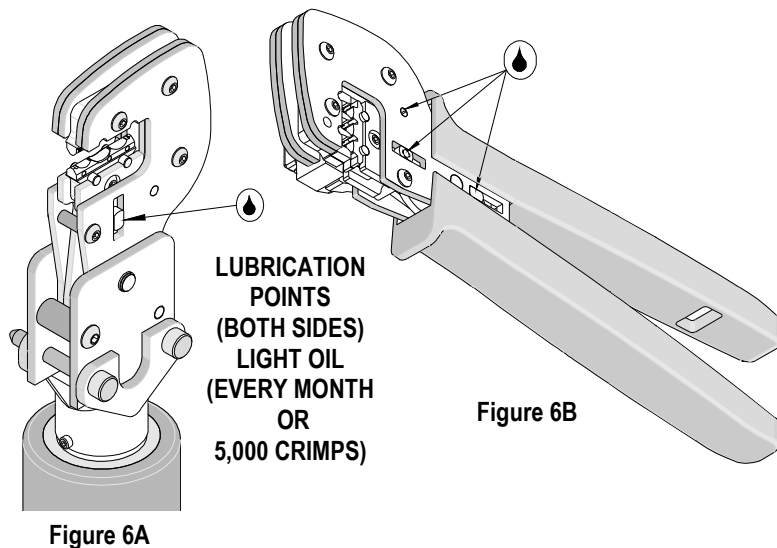

Maintenance

It is recommended that each operator of the tool be made aware of, and responsible for, the following maintenance steps:


1. Remove dust, moisture and other contaminants with a clean brush, or soft, lint-free cloth.
2. Do not use any abrasive materials that could damage the tool.
3. Make certain all pins; pivot points and bearing surfaces in the tool head are protected with a thin coat of high quality machine oil. Do not oil excessively. This tool was engineered for durability, but like any fine piece of equipment, it needs cleaning and lubrication for a maximum service life of trouble-free crimping. The use of a light oil, such as 30 weight automotive oil, every 5,000 crimps or monthly, will significantly enhance the tool life and ensure a stable calibration. See Figure 6A or 6B for lubrication points.
4. Store the tool in a clean and dry area when not in use.

Miscrimps or Jams for Hand Crimp Tools Only (See Figure 10)

Should this tool ever become stuck or jammed in a partially closed position, **Do Not force the handles open or closed.** The tool will open easily by rotating the small slotted screw marked with an arrow. See Figure 10.

Tool Calibration (See Figure 7)

A Certificate of Calibration (See Last Page) was supplied with the tool. To check this Tool, a soft metal slug or solder should be crimped in the conductor nest and the "X" Dimension measured in the conductor nest and compared to the chart. The tool should be lubricated prior to recalibration to ensure consistent measurements. Handle preload is factory set to 25-45 lbs.

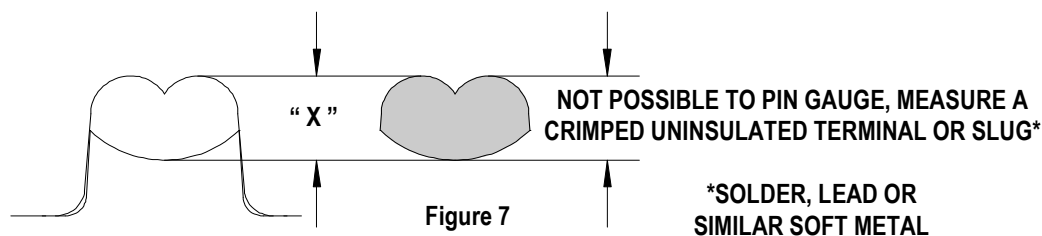

| Wire Range | | "X" Dimension Conductor Crimp | | | | | |
|------------|-----------------|-------------------------------|------|------|------|-------|------|
| | | Mean | | Go | | No Go | |
| AWG | mm ² | In. | mm | In. | mm | In. | mm |
| 10 - 12 | 5.00 – 3.30 | .083 | 2.12 | .079 | 2.01 | .089 | 2.26 |

Warranty

This tool kit is for electrical terminal crimping purposes only. This tool kit is made of the best quality materials. All vital components are long life tested. All tools are warranted to be free of manufacturing defects for a period of 30 days. Should such a defect occur, we will repair or exchange the tool kit free of charge. This repair or exchange will not be applicable to altered, misused, or damaged tools.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals and tooling.

CAUTIONS

1. Manually powered hand tools are intended for low volume or field repair. This tool is **NOT** intended for production use. Repetitive use of this tool should be avoided.
2. Insulated rubber handles are not protection against electrical shock.
3. Wear eye protection at all times.
4. Use only the Molex terminals specified for crimping with this tool.

CAUTION: Repetitive use of this tool should be avoided.


Certification

Molex does not certify or re-certify commercial grade hand tools but rather supplies the following guidelines for customers to re-certify hand tools.

- % This tool is qualified to pull force only. To re-certify, crimp a terminal to a wire, which has been stripped 12.7mm (1/2") long, so there is no crimping of the insulation. Pull the terminal and wire at a rate no faster than 25mm (1.00") per minute. See the Molex web site for the Quality Crimp Handbook for more information on pull testing.
- % When the hand tool is no longer capable of achieving minimum pull force, it should be taken out of service and replaced.
- % This tool is very difficult to disassemble and reassemble. Customer repair is not recommended.

The chart below shows all applications for this Tool Kit.

| Tool Kit Order No. | Tool Order no. | Tool Description | Power Head Order No. | Adapter Description | Figure No. |
|--------------------|----------------|----------------------------|----------------------|---------------------|------------|
| 64003-1570 | 63810-1050 | Hand Crimp Frame (Short) | N/A | N/A | 8 |
| | 63810-1000 | Hand Crimp Frame (Long) | N/A | N/A | 8 |
| | 63816-0200 | Battery Power Tool (110 V) | 63816-0300 | Power Crimp Head | 9 |
| | 63816-0250 | Battery Power Tool (220 V) | 63816-0300 | Power Crimp Head | 9 |

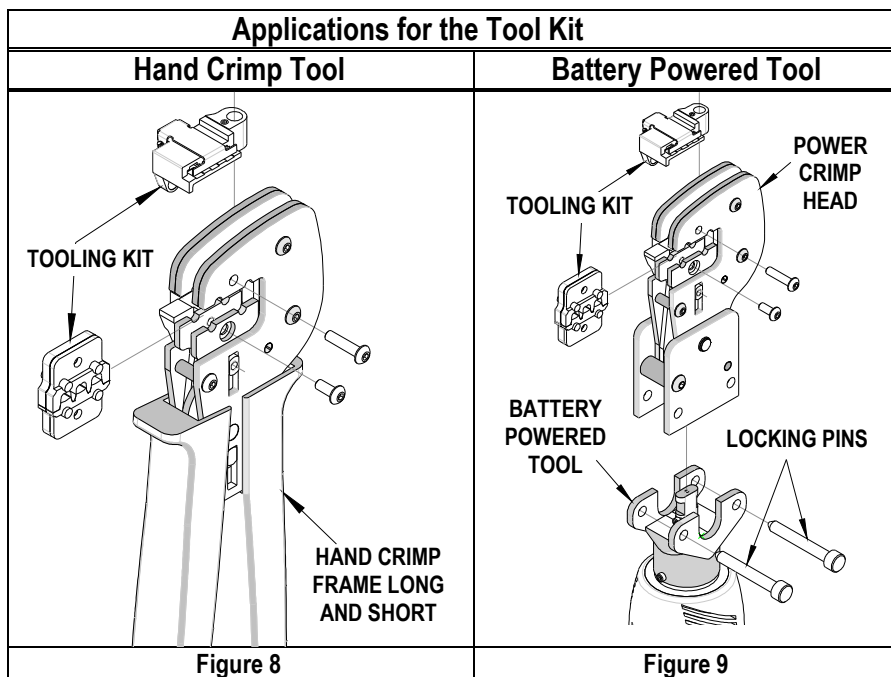

WARNING: NEVER operate service, install tool kits, or adjust the Power Crimp Head without proper instruction and without first reading and understanding the instructions in the proper Manual or Specification Sheet. See Chart above for the correct Manual or Specification Sheet.


WARNING: NEVER install tooling or service this tool while it is into any power source. Make sure the power is turned off.

CAUTION: Keep fingers away from the crimping area when operating this tool. It may cause severe injury.

CAUTION: Wear safety glasses when operating or serving this tool.

HAND TOOL PARTS LIST

| Item Number | Order Number | Description | Quantity |
|-------------|--------------|-------------------------|----------|
| 1 | 63810-1000 | Hand Crimp Frame (Long) | 1 |
| 2 | 64003-1570 | Tool Kit with Locator | 1 |
| 3 | 63811-4773 | Locator Base | 1 |
| 4 | 64003-1575 | Locator | REF |

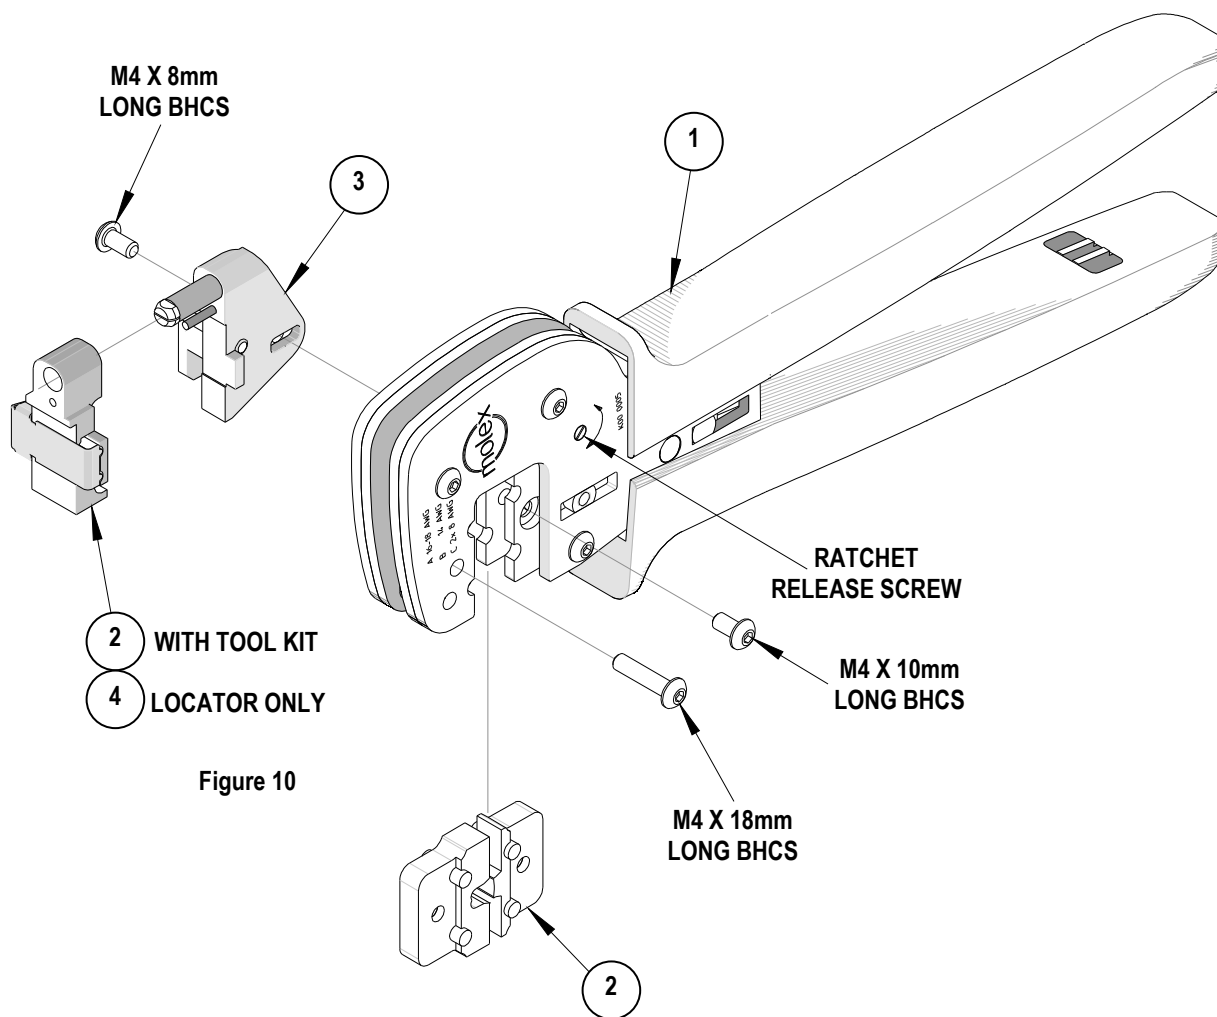

POWER HEAD PARTS LIST

| Item | Order No | Engineering No. | Description | Quantity |
|------|------------|-----------------|------------------|----------|
| 1 | 63816-0300 | 63816-0300 | Power Crimp Head | 1 |
| 2 | 64003-1570 | 64003-1570 | Tool Kit | 1 |


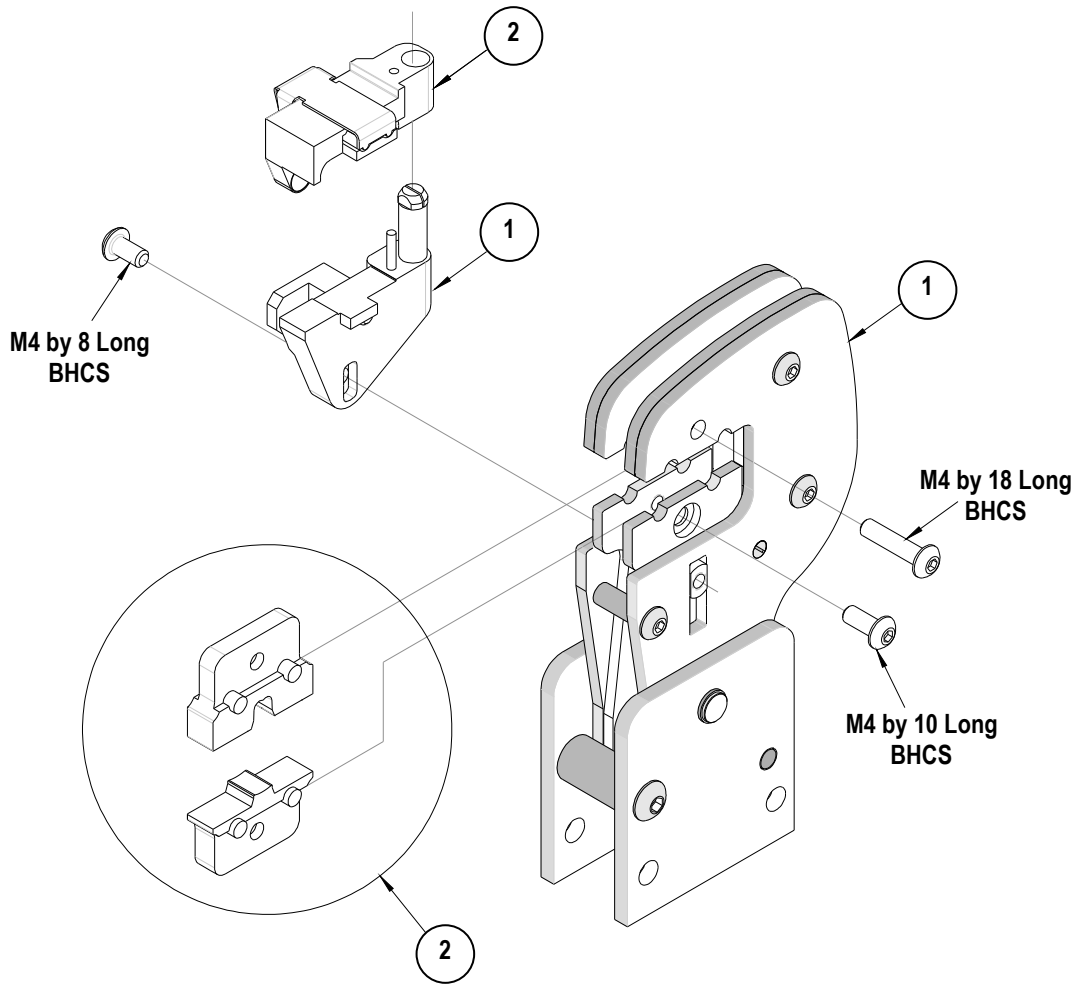


Figure 11

**Hand Crimp Tool
Krimptite™**



Certificate of Calibration

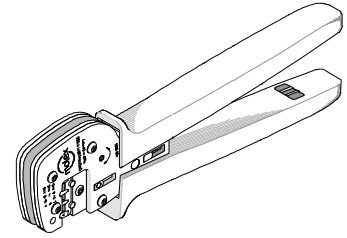

Order No. 64003-1500

Tool Order Number _____

Tool Revision _____

Serial Number _____

Date of Manufacture _____

Handle Load Range at 1 inch from the Tips = _____

Actual = _____

Pin Gauge of Conductor Nest/Nests or Slug height if the nest is the "F" Crimp style.

Range, Conductor Nest = _____ -- Actual = _____

Technician _____

Date of Calibration _____

Calibration should be done every 5,000 cycles or 3 months.
Tools should be lubricated during this operation.

Visit our Web site at <http://www.molex.com>