
# Inductive sensor BI5-M18-Y1X-H1141




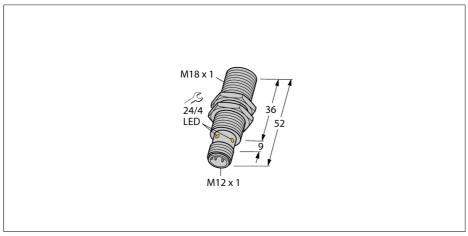

MTTF	6198 years acc. to SN 29500 (Ed. 99) 40 °C		
Protection class	IP67		
Shock resistance	30 g (11 ms)		
Vibration resistance	55 Hz (1 mm)		
Connection	male, M12 x 1		
Max. tightening torque housing nut	25 Nm		
Material active face	Plastic, PBT		
Housing material	Metal, CuZn, chrome-plated		
Dimensions	52 mm		
Design	threaded barrel, M18 x 1		
	(max. $U_i = 20 \text{ V}, I_i = 60 \text{ mA}, P_i = 200 \text{ mW}$ )		
Device designation			
Internal capacitance (C <sub>i</sub> ) / inductance (L <sub>i</sub> )	150 nF / 150 μH		
Approval acc. to	KEMA 02 ATEX 1090X		
Actuated current consumption	≤ 1.2 mA		
Non-actuated current consumption	≥ 2.1 mA		
Voltage	Nom. 8.2 VDC		
Switching frequency	1 kHz		
Output function	2-wire, NAMUR		
Ambient temperature	-25+70 °C		
Hysteresis	110 %		
Temperaturdrift	10 %		
Repeatability	≤ 2 % of full scale		
Correction factors	≤ (0,81 x Sn) mm St37 = 1; Al = 0.3; stainless steel = 0.7; Ms = 0.4		
Assured sensing range			
Mounting condition	flush		
Rated operating distance Sn	5 mm		
Ident no.	40152		
Type code	BI5-M18-Y1X-H1141		

- ATEX category II 1 G, Ex zone 0
- ATEX category II 1 D, Ex zone 20
- SIL2 as per IEC 61508
- Threaded barrel, M18 x 1
- Chrome-plated brass
- DC 2-wire, nom. 8.2 VDC
- Output acc. to DIN EN 60947-5-6 (NA-MUR)
- M12 x 1 connector

### Wiring diagram



## **Functional principle**


Inductive sensors detect metal objects contactless and wear-free. For this purpose they use a high-frequency electromagnetic AC field that interacts with the target. The sensors hosting a ferrite core coil generate the AC field through an LC resonant circuit.


## TURCK

# Inductive sensor BI5-M18-Y1X-H1141



Distance D	2 x B
Distance W	3 x Sn
Distance T	3 x B
Distance S	1.5 x B
Distance G	6 x Sn
Diameter of the active area B	Ø 18 mm

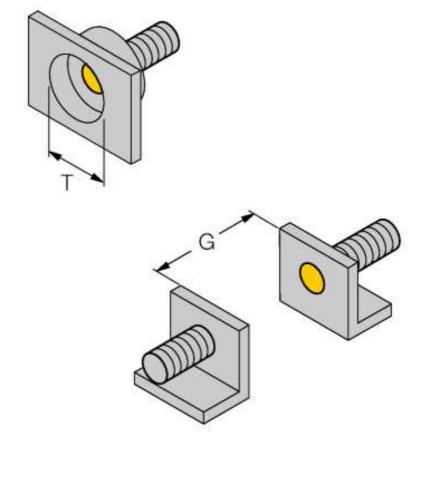

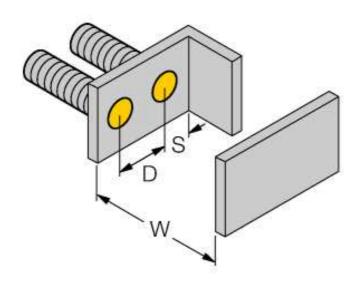

# Inductive sensor BI5-M18-Y1X-H1141



## **Accessories**

Type code	ldent no.	Description	Dimension drawing
IMC-Di-22Ex-PNO/24VDC	7560003	Zweikanaliger Trennschaltverstärker mit M12-Steckverbinder, dezentral einsetzbar, IP67, Zone 2/22 installierbar, Eingangskreise II(1) Ex ia, PNP-Transistorausgang NO	LED 25 25 25 25 25 25 25 25 25 25 25 25 25
IM1-22EX-R	7541231	Isolating switching amplifier, dual-channel; 2 relay outputs NO; input NAMUR signal; selectable ON/OFF mode for wire-break and short-circuit monitoring; adjustable signal flow (NO/ NC mode); removable terminal blocks; 18 mm width; universal voltage supply unit	104
BST-18B	6947214	Fixing clamp for threaded barrel devices, with dead-stop; material: PA6	20 28 40 24 24 30 30
QM-18	6945102	Quick-mount bracket with dead-stop; material: Chrome-plated brass Male thread M24 x 1.5. Note: The switching distance of proximity switches can be reduced by the use of quick-mount brackets.	M24 x 1.5
MW-18	6945004	Mounting bracket for threaded barrel devices; material: Stainless steel A2 1.4301 (AISI 304)	5,5 9,5 19,7 11,9 11,1 10,8 11,3 11

# Inductive sensor BI5-M18-Y1X-H1141



## **Accessories**

Type code	Ident no.	Description	Dimension drawing
BSS-18	6901320	Mounting bracket for smooth and threaded barrel devices; material: Polypropylene	o 18 26 32 32 40.5 30

## Inductive sensor BI5-M18-Y1X-H1141



## Operating manual

### Intended use

This device fulfills the directive 94/9/EC and is suited for use in explosion hazardous areas according to EN60079-0:2009, -11:2007, -26:2007. Further it is suited for use in safety-related systems, including SIL2 as per IEC 61508.

In order to ensure correct operation to the intended purpose it is required to observe the national regulations and directives.

### For use in explosion hazardous areas conform to classification

II 1 G and II 1 D (Group II, Category 1 G, electrical equipment for gaseous atmospheres and category 1 D, electrical equipment for dust atmospheres).

#### Marking (see device or technical data sheet)

Ex II 1 G and Ex ia IIC T6 acc. to EN60079-0 and -26 and Ex II 1 D Ex ia IIIC IP67 T95 °C acc. to EN60079-0

#### Local admissible ambient temperature

-25...+70 °C

#### Installation / Commissioning

These devices may only be installed, connected and operated by trained and qualified staff. Qualified staff must have knowledge of protection classes, directives and regulations concerning electrical equipment designed for use in explosion hazardous areas.

Please verify that the classification and the marking on the device comply with the actual application conditions.

This device is only suited for connection to approved Exi circuits compliant to EN60079-0 and -11. Please observe the maximum admissible electrical values.

After connection to other circuits the sensor may no longer be used in Exi installations. When interconnected to (associated) electrical equipment, it is required to perform the "Proof of intrinsic safety" (EN60079-14).

When employed in safety systems to IEC 51408 it is required to assess the failure probability (PFD) of the complete circuitry.

#### Installation and mounting instructions

Avoid static charging of cables and plastic devices. Please only clean the device with a damp cloth. Do not install the device in a dust flow and avoid build-up of dust deposits on the device.

If the devices and the cable could be subject to mechanical damage, they must be protected accordingly. They must also be shielded against strong electro-magnetic fields.

The pin configuration and the electrical specifications can be taken from the device marking or the technical data sheet.

## service / maintenance

Repairs are not possible. The approval expires if the device is repaired or modified by a person other than the manufacturer. The most important data from the approval are listed.