
Inductive sensor NI15-EM30-Y1X-H1141




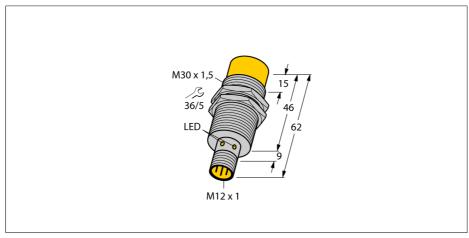

Type code	NI15-EM30-Y1X-H1141		
Ident no.	1006260		
Rated operating distance Sn	15 mm		
Mounting condition	non-flush		
Assured sensing range	≤ (0,81 x Sn) mm		
Correction factors	St37 = 1; Al = 0.3; stainless steel = 0.7; Ms = 0.4		
Repeatability	≤ 2 % of full scale		
Temperaturdrift	10 %		
Hysteresis	110 %		
Ambient temperature	-25+70 °C		
Output function	2-wire, NAMUR		
Switching frequency	0.2 kHz		
Voltage	Nom. 8.2 VDC		
Non-actuated current consumption	≥ 2.1 mA		
Actuated current consumption	≤ 1.2 mA		
Approval acc. to	KEMA 02 ATEX 1090X		
Internal capacitance (C _i) / inductance (L _i)	150 nF / 150 μH		
Device designation	Ex II 1 G Ex ia IIC T6/II 1 D Ex ia IIIC IP67 T115 °C		
	(max. $U_i = 20 \text{ V}, I_i = 20 \text{ mA}, P_i = 200 \text{ mW})$		
Design	threaded barrel, M30 x 1.5		
Dimensions	62 mm		
Housing material	Metal, V2A (1.4301)		
Material active face	Plastic, PA		
Max. tightening torque housing nut	75 Nm		
Connection	male, M12 x 1		
Vibration resistance	55 Hz (1 mm)		
Shock resistance	30 g (11 ms)		
Protection class	IP67		
MTTF	6198 years acc. to SN 29500 (Ed. 99) 40 °C		
Switching state	• yellow		

- ATEX category II 1 G, Ex zone 0
- ATEX category II 1 D, Ex zone 20
- SIL2 as per IEC 61508
- Threaded barrel, M30 x 1.5
- Stainless steel, 1.4301
- DC 2-wire, nom. 8.2 VDC
- Output acc. to DIN EN 60947-5-6 (NA-MUR)
- M12 x 1 connector

Wiring diagram

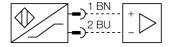

Functional principle


Inductive sensors detect metal objects contactless and wear-free. For this purpose they use a high-frequency electromagnetic AC field that interacts with the target. The sensors hosting a ferrite core coil generate the AC field through an LC resonant circuit.

TURCK

Inductive sensor NI15-EM30-Y1X-H1141



Distance D	3 x B	
Distance W	3 x Sn	
Distance T	3 x B	
Distance S	1.5 x B	
Distance G	6 x Sn	
Distance N	2 x Sn	
Diameter of the active area B	Ø 30 mm	

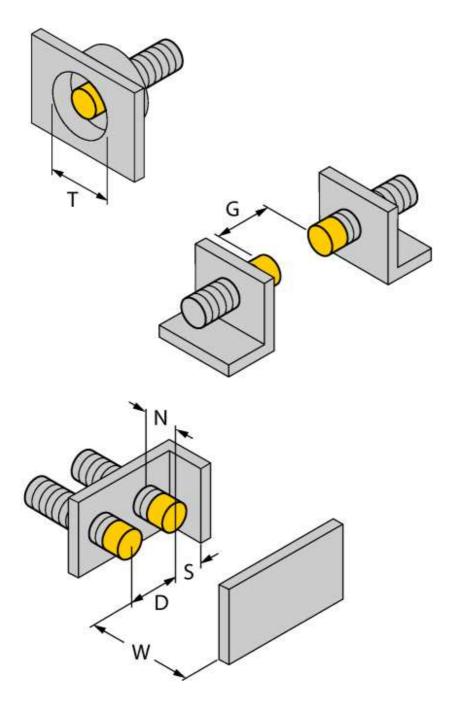

Inductive sensor NI15-EM30-Y1X-H1141



Accessories

Type code	Ident no.	Description	Dimension drawing
IMC-Di-22Ex-PNO/24VDC	7560003	Zweikanaliger Trennschaltverstärker mit M12-Steckverbinder, dezentral einsetzbar, IP67, Zone 2/22 installierbar, Eingangskreise II(1) Ex ia, PNP-Transistorausgang NO	LED 25 25 25 25 25 25 25 25 25 25 25 25 25
IM1-22EX-R	7541231	Isolating switching amplifier, dual-channel; 2 relay outputs NO; input NAMUR signal; selectable ON/OFF mode for wirebreak and short-circuit monitoring; adjustable signal flow (NO/ NC mode); removable terminal blocks; 18 mm width; universal voltage supply unit	104
MW-30	6945005	Mounting bracket for threaded barrel devices; material: Stainless steel A2 1.4301 (AISI 304)	5,5 11,2 23,63,5 57,2 10,3
BSS-30	6901319	Mounting bracket for smooth and threaded barrel devices; material: Polypropylene	o 30 40 41 41 57 90

Inductive sensor NI15-EM30-Y1X-H1141



Operating manual

Intended use

This device fulfills the directive 94/9/EC and is suited for use in explosion hazardous areas according to EN60079-0:2009, -11:2007, -26:2007. Further it is suited for use in safety-related systems, including SIL2 as per IEC 61508.

In order to ensure correct operation to the intended purpose it is required to observe the national regulations and directives.

For use in explosion hazardous areas conform to classification

II 1 G and II 1 D (Group II, Category 1 G, electrical equipment for gaseous atmospheres and category 1 D, electrical equipment for dust atmospheres).

Marking (see device or technical data sheet)

Ex II 1 G and Ex ia IIC T6 acc. to EN60079-0 and -26 and Ex II 1 D Ex ia IIIC IP67 T115 °C acc. to EN60079-0

Local admissible ambient temperature

-25...+70 °C

Installation / Commissioning

These devices may only be installed, connected and operated by trained and qualified staff. Qualified staff must have knowledge of protection classes, directives and regulations concerning electrical equipment designed for use in explosion hazardous areas.

Please verify that the classification and the marking on the device comply with the actual application conditions.

This device is only suited for connection to approved Exi circuits compliant to EN60079-0 and -11. Please observe the maximum admissible electrical values.

After connection to other circuits the sensor may no longer be used in Exi installations. When interconnected to (associated) electrical equipment, it is required to perform the "Proof of intrinsic safety" (EN60079-14).

When employed in safety systems to IEC 51408 it is required to assess the failure probability (PFD) of the complete circuitry.

Installation and mounting instructions

Avoid static charging of cables and plastic devices. Please only clean the device with a damp cloth. Do not install the device in a dust flow and avoid build-up of dust deposits on the device.

If the devices and the cable could be subject to mechanical damage, they must be protected accordingly. They must also be shielded against strong electro-magnetic fields.

The pin configuration and the electrical specifications can be taken from the device marking or the technical data sheet.

In order to avoid contamination of the device, please remove possible blanking plugs of the cable glands or connectors only shortly before inserting the cable or opening the cable socket.

service / maintenance

Repairs are not possible. The approval expires if the device is repaired or modified by a person other than the manufacturer. The most important data from the approval are listed.