
Inductive sensor NI3-EG08K-Y1



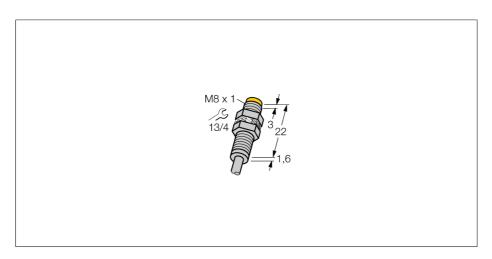

Type code	NI3-EG08K-Y1
Ident no.	1003700

 Rated operating distance Sn
 3 mm

 Mounting condition
 non-flush

 Assured sensing range
 ≤ (0,81 x Sn) mm

 Connection features
 2007 = 4 x N = 0.02

Correction factors St37 = 1; Al = 0.3; stainless steel = 0.7; Ms = 0.4

Repeatability \leq 2 % of full scale

Temperaturdrift 10 % Hysteresis 1...10 % Ambient temperature -25...+70 °C

 Output function
 2-wire, NAMUR

 Switching frequency
 5 kHz

 Voltage
 Nom. 8.2 VDC

 Non-actuated current consumption
 ≥ 2.1 mA

 Actuated current consumption
 ≤ 1.2 mA

Approval acc. toKEMA 02 ATEX 1090XInternal capacitance (C_i) / inductance (L_i)150 nF / 150 μH

Device designation

Ex II 1 G Ex ia IIC T6/II 1 D Ex ia IIIC IP67 T95 °C (max. U_i = 20 V, I_i = 60 mA, P_i = 80 mW)

Design threaded barrel, M8 x 1

Dimensions 23.6 mm Housing material Metal, V4A (1.4404)


Material active face Plastic, PA
End cap Plastic, PP
Max. tightening torque housing nut 10 Nm
Connection cable

Cable quality 4 mm, blue, Lif9YYW, PVC, 2 m

MTTF 6198 years acc. to SN 29500 (Ed. 99) 40 °C

- ATEX category II 1 G, Ex zone 0
- ATEX category II 1 D, Ex zone 20
- SIL2 as per IEC 61508
- Threaded barrel, M8 x 1
- Stainless steel, 1.4404
- DC 2-wire, nom. 8.2 VDC
- Output acc. to DIN EN 60947-5-6 (NA-MUR)
- Cable connection

Wiring diagram



Functional principle


Inductive sensors detect metal objects contactless and wear-free. For this purpose they use a high-frequency electromagnetic AC field that interacts with the target. The sensors hosting a ferrite core coil generate the AC field through an LC resonant circuit.

TURCK

Inductive sensor NI3-EG08K-Y1



Distance D	3 x B
Distance W	3 x Sn
Distance T	3 x B
Distance S	1.5 x B
Distance G	6 x Sn
Distance N	2 x Sn
Diameter of the active area B	Ø 8 mm

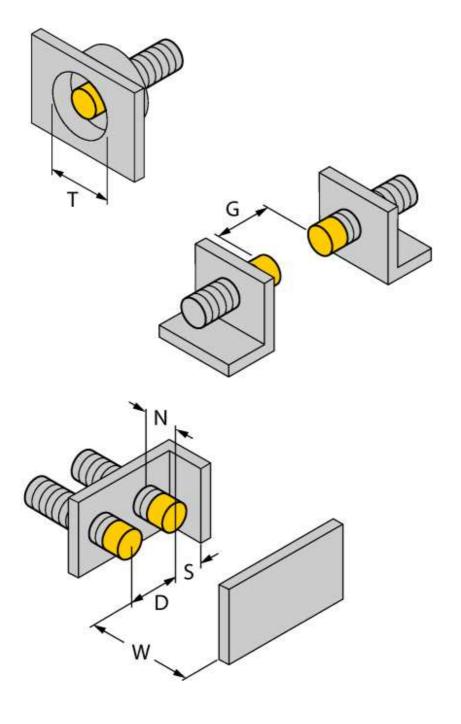

Inductive sensor NI3-EG08K-Y1



Accessories

Type code	Ident no.	Description	Dimension drawing
IM1-22EX-R	7541231	Isolating switching amplifier, dual-channel; 2 relay outputs NO; input NAMUR signal; selectable ON/OFF mode for wire-break and short-circuit monitoring; adjustable signal flow (NO/ NC mode); removable terminal blocks; 18 mm width; universal voltage supply unit	104
BST-08B	6947210	Fixing clamp for threaded barrel devices, with dead-stop; material: PA6	7,4 M3 M3 M3 M4 A4 12 M3
QM-08	6945100	Quick-mount bracket with dead-stop, chrome-plated brass, male thread M12 x 1. Note: The switching distance of proximity switches may be reduced through the use of quick-mount brackets.	M12 x 174
MW-08	6945008	Mounting bracket for threaded barrel devices; material: Stainless steel A2 1.4301 (AISI 304)	7,9 31,8 1,8 7,1 9,5 7,9 25,4 1,8 7,1
BSS-08	6901322	Mounting bracket for smooth and threaded barrel devices; material: Polypropylene	0 8 20 20 26.5 34 30

Inductive sensor NI3-EG08K-Y1



Operating manual

Intended use

This device fulfills the directive 94/9/EC and is suited for use in explosion hazardous areas according to EN60079-0:2009, -11:2007, -26:2007. Further it is suited for use in safety-related systems, including SIL2 as per IEC 61508.

In order to ensure correct operation to the intended purpose it is required to observe the national regulations and directives.

For use in explosion hazardous areas conform to classification

II 1 G and II 1 D (Group II, Category 1 G, electrical equipment for gaseous atmospheres and category 1 D, electrical equipment for dust atmospheres).

Marking (see device or technical data sheet)

Ex II 1 G and Ex ia IIC T6 acc. to EN60079-0 and -26 and Ex II 1 D Ex ia IIIC IP67 T95 °C acc. to EN60079-0

Local admissible ambient temperature

-25...+70 °C

Installation / Commissioning

These devices may only be installed, connected and operated by trained and qualified staff. Qualified staff must have knowledge of protection classes, directives and regulations concerning electrical equipment designed for use in explosion hazardous areas.

Please verify that the classification and the marking on the device comply with the actual application conditions.

This device is only suited for connection to approved Exi circuits compliant to EN60079-0 and -11. Please observe the maximum admissible electrical values.

After connection to other circuits the sensor may no longer be used in Exi installations. When interconnected to (associated) electrical equipment, it is required to perform the "Proof of intrinsic safety" (EN60079-14).

When employed in safety systems to IEC 51408 it is required to assess the failure probability (PFD) of the complete circuitry.

Installation and mounting instructions

Avoid static charging of cables and plastic devices. Please only clean the device with a damp cloth. Do not install the device in a dust flow and avoid build-up of dust deposits on the device.

If the devices and the cable could be subject to mechanical damage, they must be protected accordingly. They must also be shielded against strong electro-magnetic fields.

The pin configuration and the electrical specifications can be taken from the device marking or the technical data sheet.

service / maintenance

Repairs are not possible. The approval expires if the device is repaired or modified by a person other than the manufacturer. The most important data from the approval are listed.