


ANAFI™

ANYTIME. ANYWHERE

USER GUIDE

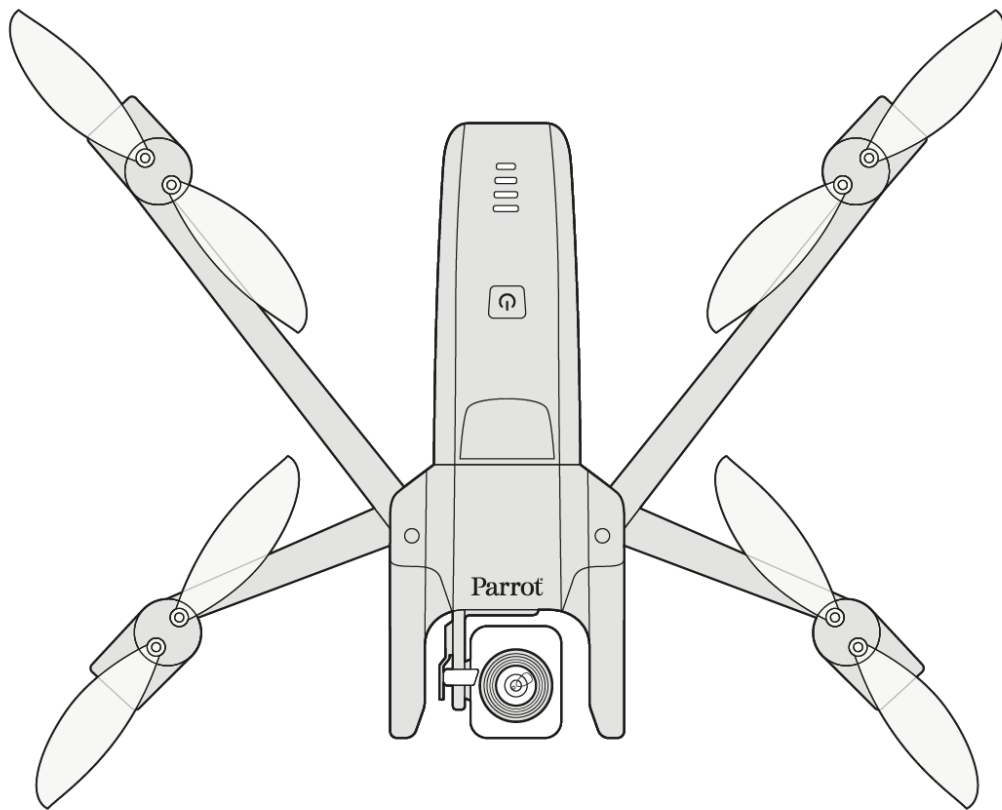

Parrot®

EVERYDAY LIFE. ELEVATED

WE ARE PARROT. WELCOME TO THE FAMILY!

With **ANAFI**, you have chosen the finest, quietest, and most portable flying 4K HDR camera, you can use everywhere on the go, anytime.

We strongly recommend you read the following information and instructions thoroughly before you get **ANAFI** in the air, to make the most of your first amazing 25-minute flight.

The indispensable prerequisites, on the next pages, will not occupy more than 5 minutes of your time: ANAFI requires the FreeFlight 6 app to fly, and to make sure your drone and controller are fully up-to-date with the latest features.

As you discover the world of possibilities that **ANAFI** opens to you, you will find out that carefully planning your flights is exciting, and only adds to the fun of flying them.

Have a great read, and many outstanding hours flying **ANAFI**!

PREREQUISITES

You want ANAFI up in the air as soon as possible, so do we. Refer to the enclosed Super Quick Start Guide (SQSG) if you need illustrated guidance to get these quick prerequisites out of the way.

1. **Wake your ANAFI's smart battery up.** Charge the battery using the enclosed USB-A to USB-C cable and a USB-A power adapter (not included in the box). The battery's LEDs start flashing; it is awake. Let it charge while you read. **Parrot recommends you always run a full charge of your smart battery before flying ANAFI.**
2. **Download FreeFlight 6 on your iOS or Android smartphone: ANAFI requires FreeFlight 6 to fly.** The app will enable you to update your **Parrot Skycontroller 3** and **ANAFI** when you power them on for the first time.



Android FreeFlight 6 QR code



iOS FreeFlight 6 QR code


When you have downloaded and installed **FreeFlight 6**, unfold the central arm of **Parrot Skycontroller 3** to power it on.

Use your device's USB cable to connect it to **Parrot Skycontroller 3** USB-A port, and install it on the device holder, as shown in the enclosed SQSG.

A prompt appears on your screen, which invites you to allow the communication between your device and the controller.


Tap "Allow" (iOS) or "OK" (Android); **FreeFlight 6** runs. After your device displays the app's splash screen, you get to **FreeFlight 6** homepage.

If the prompt does not appear on your screen when you connect your device to your *Parrot Skycontroller 3*, launch *FreeFlight 6* manually, as any other app.

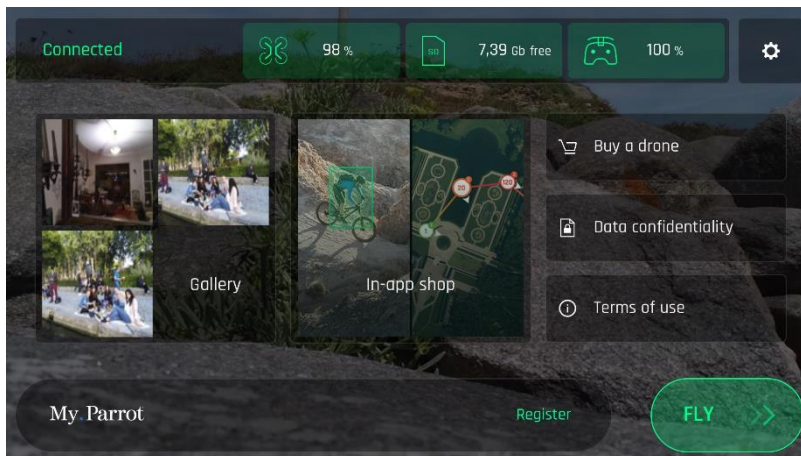


iOS FreeFlight 6 homepage

3. Tap the green “FLY” box on the homepage of FreeFlight 6 to launch the initial updates. FreeFlight 6 automatically updates the Parrot Skycontroller 3 first, and ANAFI second.

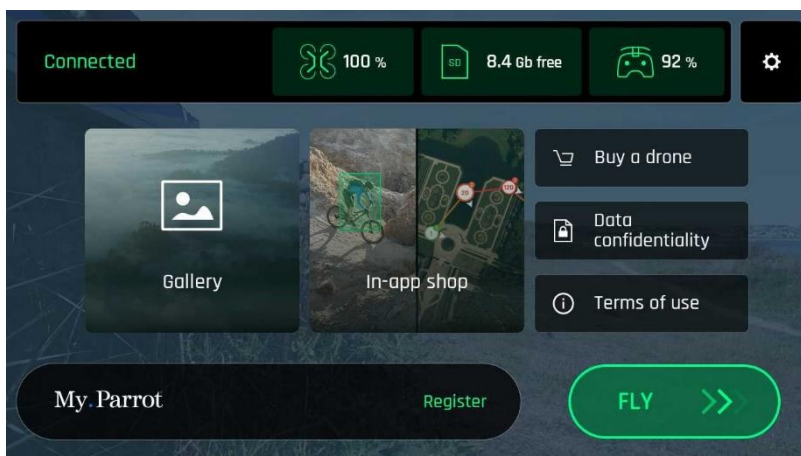


Android FreeFlight 6 homepage

4. Parrot Skycontroller 3 update: tap the green “CONTINUE” box to proceed. FreeFlight 6 displays an animation and a progress circle on a screen labelled “Preparing your controller”. When the update is finished, the screen displays “Your controller is ready”. Tap “CONTINUE” to access the update of ANAFI (screenshots below are Android).

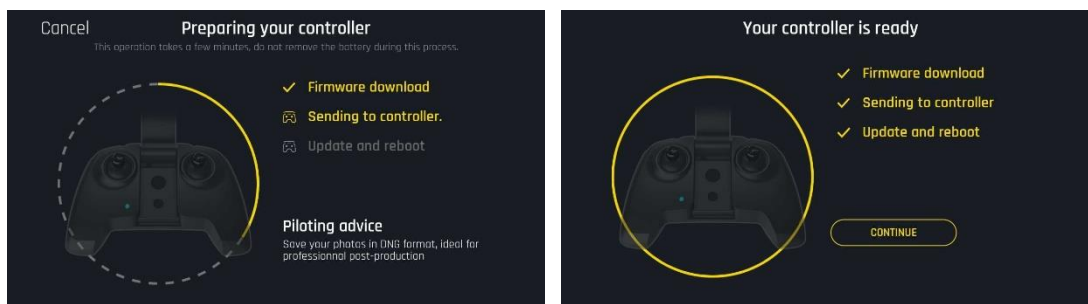

ANAFI

5. **ANAFI update: tap the green "CONTINUE" box to proceed.** FreeFlight 6 displays an animation and a progress circle on a screen labelled "Preparing your drone". When the update is finished, the screen displays "Your drone is ready" and a "CONTINUE" box. Tap this "CONTINUE" box to come back to **FreeFlight 6** homepage (screenshots below are iOS).

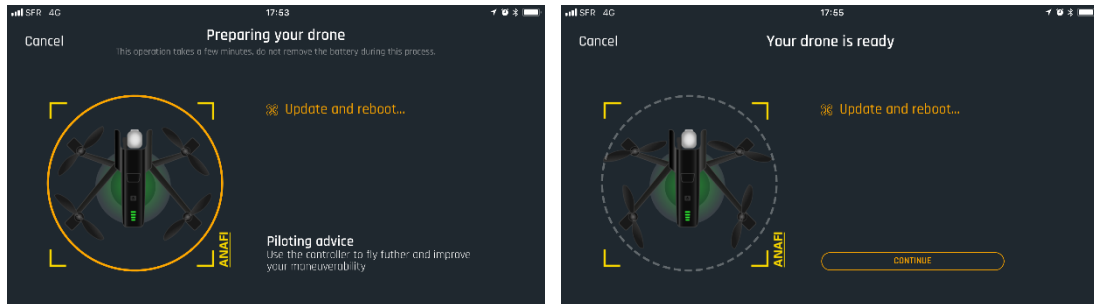

6. All systems are ready for flight!

TABLE OF CONTENTS

WE ARE PARROT. WELCOME TO THE FAMILY!	3
PREREQUISITES	4
TABLE OF CONTENTS.....	7
FOREWORD.....	10
About 4K video formats.....	10
About the smart battery	10
About auto-RTH (return home)	10
About devices.....	10
DISCLAIMER.....	11
TECHNICAL SPECIFICATIONS.....	12
PACKAGE CONTENTS	13
PRESENTATION OF ANAFI.....	14
Ready to store or carry.....	14
Ready to fly.....	14
PRESENTATION OF PARROT SKYCONTROLLER 3	15
Ready to store or carry.....	15
Ready to pilot	15
Camera and gimbal controls.....	16
LED status indicator color codes.....	16
PRE-FLIGHT CHECKLIST.....	17
Equipment.....	17
Regulations.....	17
Flight conditions	17

ANAFI

GETTING STARTED.....	18
TAKING OFF.....	19
Ground take-off.....	19
Hand launch.....	19
FLYING.....	21
RETURNING HOME.....	22
LANDING.....	22
SMART LIPO BATTERY.....	23
Battery removal.....	23
Battery installation.....	24
Battery charging.....	24
Battery care and safety.....	25
MEDIA RETRIEVAL.....	27
Extracting the microSD card.....	27
Retrieving photos and videos.....	27
Installing the microSD card.....	27
Compatible microSD cards.....	28
INTRODUCING FREEFLIGHT 6.....	29
Presentation of the iOS HUD (video mode view).....	30
Presentation of the Android HUD (photo mode view).....	32
PREFERENCES.....	33
Interface.....	33
Piloting.....	33
Safety.....	34
Camera.....	34
Network.....	35

VIDEOS AND PHOTOS	36
Making videos	36
Taking photos	38
GIMBAL TILT AND ZOOM CONTROLS	40
Gimbal tilt control	40
Zoom control.....	40
Camera Calibration (exceptional procedure)	43
PRO IMAGING SETTINGS	46
Exposure value (EV).....	46
Shutter speed (s).....	47
ISO value (ISO)	47
White balance (WB)	48
HDR	49
P-LOG	49
CINESHOTS	50
360°	50
Reveal	50
Rise	51
Epic.....	51

FOREWORD

About 4K video formats

4K video formats are professional grade media which may not be read natively by slower computers. Shoot in 1080p or use a video converter to turn your ANAFI's 4K videos into a more manageable format (like 1080p) if they do not read properly on your equipment. This is especially true for Parrot's 4K Cinema format, which can only be handled by professional editing equipment.

About the smart battery

ANAFI's smart battery is preinstalled on your drone. Always install it the same way and never attempt to install it upside down as it could expose your battery and your drone to irrecoverable electrical damage. As you will find out by reading this guide, ANAFI's battery is smart enough to enter a wintering mode when you are not using it for ten days in a row. This also means you need to wake it up and charge it completely before you fly ANAFI for the first time.

About auto-RTH (return home)

By design, when synchronized to GPS and Glonass satellites and when short on power, ANAFI will always attempt to come back to its most recent take-off point, at a minimal height of 20 meters over this take-off point.

For this reason, Parrot recommends ANAFI pilots to take extra care when moving away from the take-off location of their drone (for example to follow ANAFI). In such cases, pilots must cancel the auto-RTH from the orange 1-minute alert which appears on the screen of their device, and keep piloting ANAFI while monitoring closely its battery level, until it runs out of power and lands.

About devices

In the following pages, the word "*device*" refers to the smartphone, either iOS or Android-based, on which FreeFlight 6 is installed.

DISCLAIMER

1. **ANAFI** IS NOT A TOY and should not be used or handled by a person under the age of 14 years.
2. BEFORE USING **ANAFI**:
 - (A) CAREFULLY READ the user manual and all information and documentation available on www.parrot.com, which is susceptible to be updated at any time and without prior notice (hereinafter referred to as "Parrot Documentation"). SPECIAL ATTENTION must be given to the paragraphs marked with the symbol ⚠ ;
 - (B) ENSURE YOU ARE AWARE OF THE REGULATIONS APPLICABLE TO THE USE OF DRONES AND THEIR ACCESSORIES (hereinafter referred to as "Applicable Regulations");
 - (C) REMEMBER that **ANAFI** may expose others and yourself to EQUIPMENT DAMAGE, PERSONAL INJURY, OR BOTH, which could result in serious harm or death.
3. Be aware that videos and photos that are promoted and advertised by Parrot Drones SAS and its affiliates have been made by and with experienced professionals and drone pilots. IN CASE OF DOUBT RELATING TO THE USE OF YOUR **ANAFI** DRONE AND ITS ACCESSORIES, ALWAYS REFER TO THE MOST RECENT VERSION OF THE PARROT DOCUMENTATION.
4. TO THE EXENT PERMITTED BY APPLICABLE LAW, PARROT DRONES SAS, ITS SUBSIDIARIES, AND THEIR RESPECTIVE DISTRIBUTORS AND RETAILERS SHALL NOT BE LIABLE FOR ANY DAMAGES ARISING FROM, OR IN CONNECTION WITH THE NON-COMPLIANCE OF PARROT WITH THE DOCUMENTATION OR THE APPLICABLE REGULATIONS BY YOURSELF OR ANY PERSON USING YOUR **ANAFI**.

TECHNICAL SPECIFICATIONS

DRONE

- Size folded: 244x67x65mm
- Size unfolded: 175x240x65mm
- Weight: 320g
- Max transmission range: 4km with Skycontroller 3
- Max flight time: 25min
- Max horizontal speed: 55km/h
- Max vertical speed: 4m/s
- Max wind resistance: 50km/h
- Service ceiling: 4,500m above sea level
- Operating temperature range: -10°C to 40°C

DRONE SENSORS

- Satellite Positioning: GPS and Glonass
- Barometer & magnetometer
- Vertical camera & ultrasound sensor
- 2x6-axis IMUs (1 for the flight, 1 for the camera):
 - 2x3-axis accelerometers
 - 2x3-axis gyroscopes

SMART BATTERY

- Type: High density LiPo (2 cells)
- Capacity: 2,700mAh
- Flight time per charge: 25min
- Charging port: USB-C
- Weight: 125g
- Voltage: 7.6V
- Max charging power: 24W

CONTROLLER


- Size folded: 94x152x72mm
- Size unfolded: 153x152x116mm
- Weight: 386g
- Transmission system: Wi-Fi 802.11a/b/g/n
- Operating frequencies: 2.4GHz – 5.8GHz
- Max transmission range: 4km
- Live streaming resolution: 720p (HD) 1280x720
- Battery capacity: 2,500mAh 3.6V
- Supported mobile devices: screen size up to 6.2"
- USB ports: USB-C (charge), USB-A (connection)

IMAGING SYSTEM

- Sensor: 1/2.4" CMOS
- LD-ASPH (low dispersion aspherical) lens:
 - Aperture: f/2.4
 - 35mm format equivalent: 23mm
 - Depth of field: 1.5m to ∞
- Electronic shutter speed: 1 to 1/10000s
- ISO range: 100 to 3200
- Video resolutions:
 - DCI 4K (cinema) 4096x2160 24fps
 - 2160p (4K UHD) 3840x2160 24/25/30fps
 - 1080p (FHD) 1920x1080 24/25/30/48/50/60fps
- Video horizontal field of view (HFOV): 69°
- Max video bitrate: 100Mbps
- Video format: MP4 (H.264)
- Digital zoom:
 - Lossless: up to x2.8 (FHD); up to x1.4 (4K UHD)
 - Standard: up to x3 (all resolutions)
- HDR: 4K UHD video
- Photo resolutions:
 - Wide (JPEG & DNG): 21MP (5344x4016) / 4:3 / 84° HFOV
 - Rectilinear (JPEG): 16MP (4608x3456) / 4:3 / 75.5° HFOV
- Photo modes:
 - Single
 - Timer

IMAGE STABILIZATION

- 3-axis hybrid stabilization:
 - Mechanical: 2-axis (roll & pitch)
 - Electronic (EIS): 3-axis (roll, pitch & yaw)
- Controllable tilt range: -90° to +90° (ground to sky)

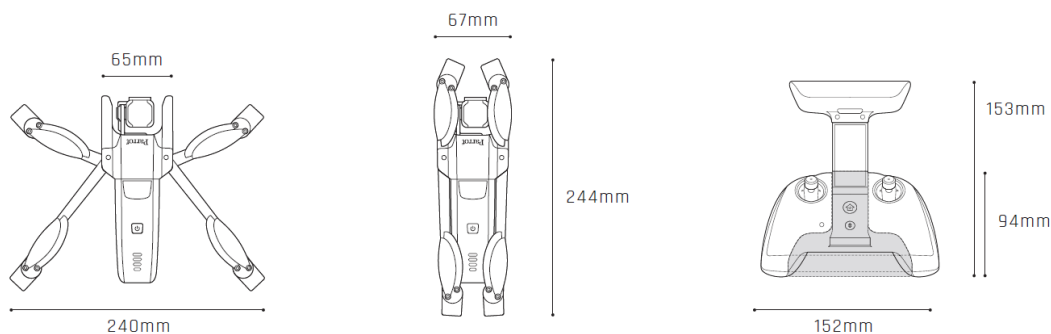

PACKAGE CONTENTS

Your **ANAFI** package contains:


- an **ANAFI** drone
- a smart battery, preinstalled on **ANAFI**
- a carrying case
- a lens cap
- a USB-A to USB-C charging cable
- a 16GB microSD card, preinstalled in **ANAFI**
- a microSD to SD card adapter
- a **Parrot Skycontroller 3**
- 8 spare propeller blades
- a mounting tool
- a Flight Safety Guide
- a Super Quick Start Guide (SQSG)
- a Wi-Fi settings card



ANAFI

PRESENTATION OF ANAFI

Ready to store or carry

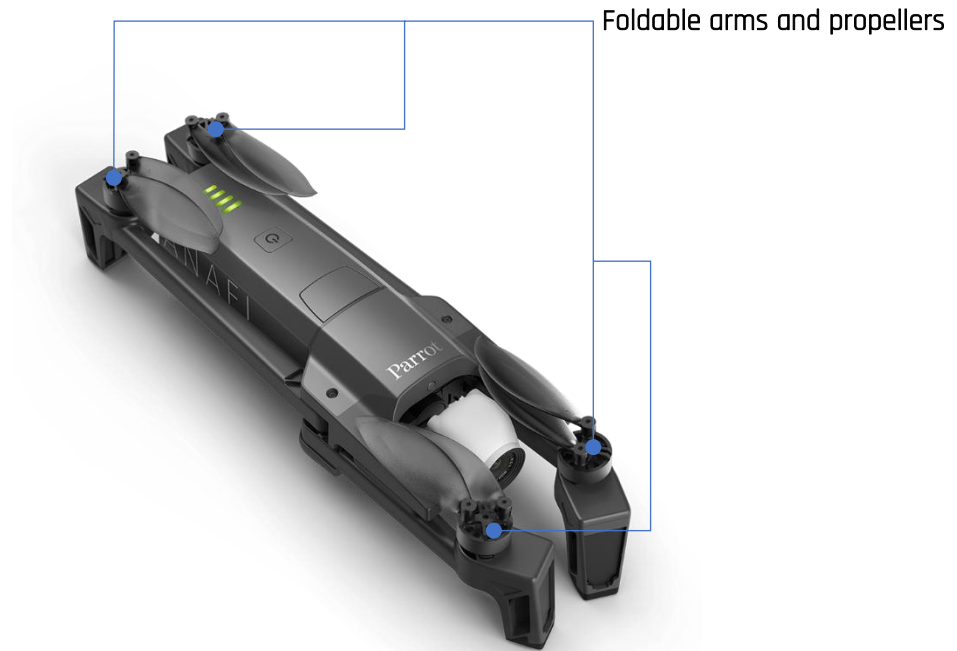

Ready to fly



PRESENTATION OF PARROT SKYCONTROLLER 3

Ready to store or carry

Left control stick

Right control stick



Power-on foldable arm and device holder

Ready to pilot

LED status indicator


Wi-Fi antenna



RTH (return home) button

Take-off/landing button

Camera and gimbal controls

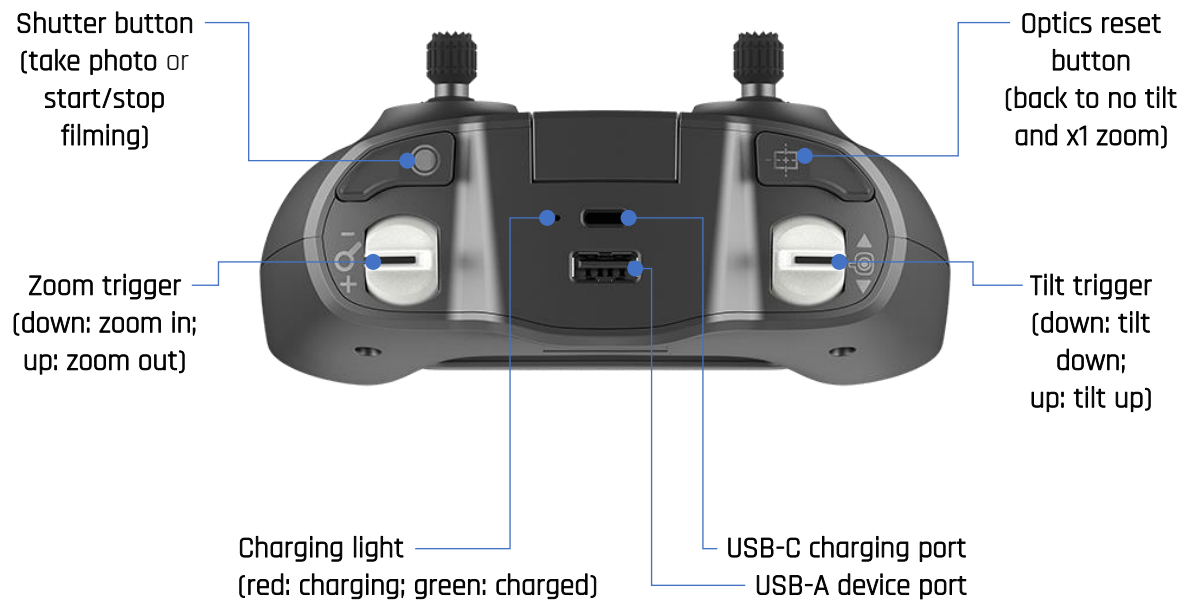

LED status indicator color codes

When the **Parrot Skycontroller 3** is powered on, its LED status indicator gives you an instant visual indication:

- | | |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> - flashing green: - alternating light blue and dark blue: - flashing light blue: - steady dark blue: - alternating purple and dark blue: - alternating red and any other color: | <p>Skycontroller 3 update in progress;</p> <p>connecting to ANAFI;</p> <p>no drone configured or wrong WPA key;</p> <p>connected to ANAFI;</p> <p>autonomous flight in progress;</p> <p>low battery alert (ANAFI, Skycontroller 3, or both) or RTH alert.</p> |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

PRE-FLIGHT CHECKLIST

Equipment

- Make sure you have downloaded the latest version of FreeFlight 6 and that both your Parrot Skycontroller 3 and your ANAFI have been updated with the latest versions of firmware.
- For the ultimate ANAFI experience, make sure you have the right USB-A cable to connect your Parrot Skycontroller 3 and your device.
- Make sure ANAFI is fitted with a microSD card with enough free memory space.
- Make sure all four foldable arms of ANAFI are unfolded.
- Make sure its propellers are clean, intact and unobstructed.
- Make sure both ANAFI's and Parrot Skycontroller 3's batteries are fully charged.
- Make sure ANAFI's battery is securely installed on the drone's body.
- Make sure the lens cap has been removed from ANAFI's camera.
- Make sure ANAFI's lens is clean – if you need to clean it, hold the gimbal between two fingers so that you do not pressure its mechanism when you clean the lens, and gently wipe the lens with a microfiber cloth.


Regulations

- Make sure the use of ANAFI is allowed where you are intending to fly.
- Check for potential restrictions regarding the use of Wi-Fi frequencies in the area where you are intending to fly.

Flight conditions

- Check that your flying zone is safe and clear.
- Do not fly ANAFI at night.
- Do not fly ANAFI over urban areas or over restricted airspaces such as airports, train stations, power plants, national reserves, and so on.
- Check the weather: do not fly ANAFI in the rain, fog, snow, or in a wind exceeding 14 meters per second or 50 km/h.
- Due to the operating mode of its vertical camera and ultrasound sensor, Parrot recommends you do not fly ANAFI over water and other reflective surfaces (mirrors, glass, and so on).

GETTING STARTED

1. Charge the battery using the enclosed USB-A to USB-C cable and a USB-A power adapter (not included in the box). Charging times depend on the supply capacity of the adapter. Refer to the *"Battery charging"* section of this guide for additional information. **Parrot recommends you always run a full charge of your smart battery before flying ANAFI.**
2. If you want to use the controller and enjoy the full **ANAFI** experience, charge **Parrot Skycontroller 3**.
3. Check that your flying zone is safe and clear.
4. To start the drone, place it on a flat horizontal surface and press the power button.
5. **a) If you use Parrot Skycontroller 3**, unfold the central part of the controller to power it on, wait for the steady dark blue light, then plug your device to the controller using a USB cable. **Parrot recommends you always fly ANAFI with Parrot Skycontroller 3 and a device, for the best flight experience.**
b) If you do not wish to use the controller, connect your device to the Wi-Fi network of **ANAFI**, using the Wi-Fi settings card located inside the drone's carrying case - SSID format: Anafi-xxxxx.
6. **FreeFlight 6** runs automatically on your device and connects to **ANAFI** and to **Parrot Skycontroller 3**.
7. Check for controller and drone software updates.
8. Calibrate your **ANAFI**, your **Parrot Skycontroller 3**, or both, if required, following the instructions on the screen of your device.
9. Check that your flying zone is still safe and clear, and that no one (people, animal) has approached or is approaching **ANAFI**.
10. Stay at least 2m (6ft) clear from the drone, press the  button and enjoy the flight!

TAKING OFF

Ground take-off

Position **ANAFI** on a flat, even, and clear surface.

Power it on, move at least 2m (6ft) away from **ANAFI** and check that the surroundings of the drone are absolutely clear.

Press the  button on your **Parrot Skycontroller 3**, or tap the green "TAKE-OFF" box, on the screen of your device.


ANAFI takes off and stabilizes at 1m (3ft) from the ground, waiting for commands from the pilot.

Hand launch

- ⚠ Be especially careful when you hand launch **ANAFI**. This procedure is safe provided you are not distracted or startled by an outside event with a live drone in your hand: concentrate on what you are doing, but always stay aware of your surroundings.


Activate the hand-launch option from the "Interface" menu of **FreeFlight 6** "PREFERENCES" (refer to the "PREFERENCES - Interface" section of this guide for further information).


Power **ANAFI** on and position the drone on your flat, open hand. On the screen of your device, the green "TAKE-OFF" box is replaced by a blue "HAND LAUNCH" box.

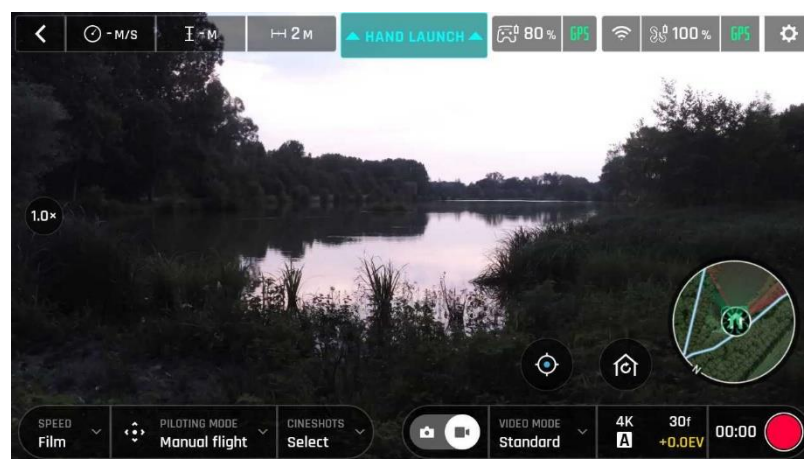

ANAFI: Android Hand Launch screen

ANAFI

Press the  button on your **Parrot Skycontroller 3**, or tap the blue “HAND LAUNCH” box on the screen of your device. The drone's blades start rotating slowly and the screen of your device displays a hand-launch animation.

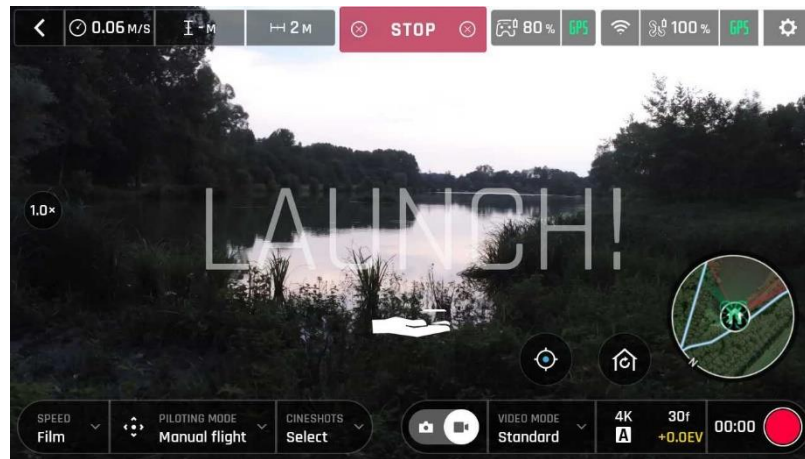









ANAFI: Android Hand Launch animation

Briefly and briskly lift ANAFI up and forward with your open hand.



ANAFI is airborne. It stabilizes, waiting for commands from the pilot.

FLYING


Left control stick (default mode)	Right control stick (default mode)
 <p>Rise</p>	 <p>Forward</p>
 <p>Descend</p>	 <p>Reverse</p>
 <p>Turn right</p>	 <p>Move to the right</p>
 <p>Turn left</p>	 <p>Move to the left</p>

ANAFI


RETURNING HOME

To bring **ANAFI** back to its take-off position, press the  button on your **Parrot Skycontroller 3**, or tap the  icon on the screen of your device.


ANAFI rises to 20 meters over its take-off point - if it was flying lower than this altitude - and flies back over its take-off position.

In the Follow Me mode (in-app purchase), when the  button or icon is activated, **ANAFI** flies back to the position of the pilot.

LANDING

Fly **ANAFI** directly over a flat, even, and clear surface, then press the  button, or tap the orange "LAND" box on the screen of your device.

ANAFI lands.

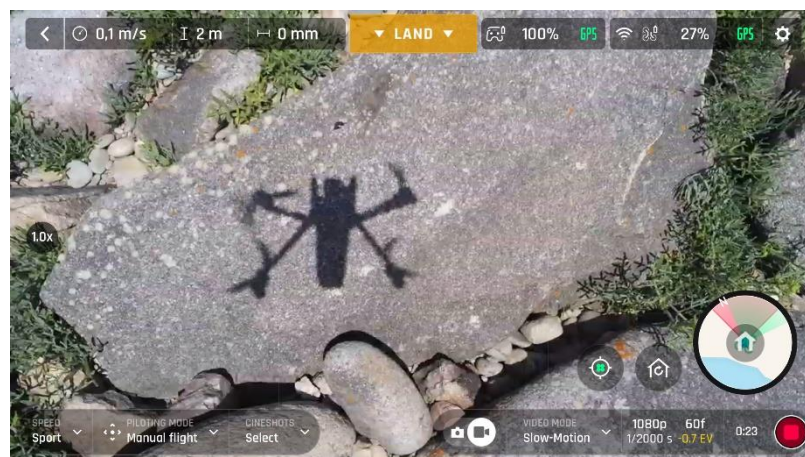

SMART LIPO BATTERY

ANAFI's smart LiPo battery is preinstalled on the drone and should always be reinstalled in the same way, with the LEDs and power button facing up, to avoid irrecoverable electric damage to the battery, to the drone, or to both.

The smart battery can be charged whether it is installed on ANAFI, or not. However, you will need to remove the battery from the drone to access your microSD card. Refer to the *"Retrieving media"* section of this guide for further information.

- ⚠ When handling ANAFI, you should never apply pressure and generally avoid touching the drone's camera and gimbal – its most sensitive parts. The following directions will help you handle your drone and battery safely.

Battery removal

To remove the smart battery from the drone, unfold the back arms of ANAFI. Set the drone on a flat and even surface (such as a table), and press the push-button which connects the battery to the body of the drone with your thumb. Gently slide your thumb and the battery toward the back of ANAFI. When the hook of the push-button is disengaged from the body of the drone, lift the battery away from ANAFI.



ANAFI: battery removal

Battery installation

To install the smart battery back on the drone, unfold the back arms of ANAFI. Set the drone on a flat and even surface (such as a table), and position the battery's three hooks into the drone's corresponding slots. Place your middle finger on the Parrot logo of ANAFI and your thumb on the back of the smart battery. Squeeze your fingers together until you feel and hear the battery clicking into the body of the drone. You are set!



ANAFI: battery installation

Battery charging

To charge ANAFI's smart LiPo battery, use the enclosed USB-A to USB-C cable to plug the battery to a power source. This convenient cable enables you to charge your battery from:

- a wall socket, through an AC adapter (not included in the box);
- a tabletop or laptop computer's USB-A port;
- a power bank's USB-A port.

Indicative **full charging times** depending on power sources are as follows (at 20°C):

- AC adapter (5V - 3A): between 150 and 210 minutes;
- a computer's or power bank's USB-A port: between 270 and 320 minutes.

ANAFI's smart battery can also be recharged through a Power Delivery adapter, using a USB-C to USB-C cable (not included in the box). In that configuration, full charging time of the battery can be reduced to 105 minutes.

When ANAFI's smart LiPo battery is plugged to a power source and charging, **its 4 LEDs indicate in real time its level of charge:**

- LED 1 flashing: battery is between 0 and 25% charged;
- LED 1 steady & LED 2 flashing: battery is between 25 and 50% charged;
- LEDs 1 and 2 steady & LED 3 flashing: battery is between 50 and 75% charged;
- LEDs 1, 2 and 3 steady & LED 4 flashing: battery is between 75 and 100% charged;
- battery is plugged and all LEDs are off: battery is full.

Similarly, when **your battery is not installed on ANAFI**, you can check its charge level at any time by pressing its power button:

- 1 steady LED lights up: battery is between 0 and 25% charged;
- 2 steady LEDs light up: battery is between 25 and 50% charged;
- 3 steady LEDs light up: battery is between 50 and 75% charged;
- 4 steady LEDs light up: battery is between 75 and 100% charged.

Finally, the same logic applies when **the smart LiPo battery is installed on the drone and when ANAFI is powered on**. The number of steady LEDs enables you to estimate your remaining flying time:

- 1 steady LED is lit up: less than 6 minutes flying time remaining;
- 2 steady LEDs are lit up: between 6 and 12 minutes flying time remaining;
- 3 steady LEDs are lit up: between 12 and 18 minutes flying time remaining;
- 4 steady LEDs are lit up: between 18 and 25 minutes flying time remaining.

Battery care and safety

As you can see, ANAFI's smart LiPo battery is as high-tech as any other element of your flying 4K HDR camera.

Its firmware can be updated, like that of the drone and that of the controller, and it even features a wintering mode, designed to increase its durability and facilitate its care. Ideally, when not in use for a prolonged period, batteries should be stored half-charged. When not in use for 10 days, ANAFI's smart battery discharges itself, if required, to 65% charge, over a 48h period. In other words, after a maximum of 12 days without use, this smart battery enters hibernation with a charge level which never exceeds 65%. If you leave your ANAFI battery for 12 days, you will find out its power button does not activate the charge level LED indicators. **The battery needs to be charged to exit the wintering mode and start operating as described in the earlier paragraphs: this behavior preserves the battery over time. Parrot recommends you always run a full charge of your smart battery before flying ANAFI.**

Like all other LiPo batteries, ANAFI's smart battery must be handled, transported and stored with care:

- never leave a battery unattended while charging;
- never expose a battery to extreme temperatures, neither hot, nor cold;
- never charge a battery which is still warm from use (wait for at least 20 minutes);
- never use or recharge a damaged or swollen battery;
- always store your battery in a dry, ventilated place, at a temperature close to 20°C;
- always carry your battery in a fire-retardant bag or case (unless it is installed on ANAFI: it can then be transported with the drone, inside its carrying case).

Finally, note that ANAFI's smart battery will only allow charge in ambient temperatures between +10°C and +45°C, and that using ANAFI in temperatures approaching 0°C will reduce

ANAFI

its flying time. To minimize this slight drop in the smart battery's capacity, keep your battery as warm as possible before starting a flight in a cold environment.

- ⚠ If the behavior of your battery is not consistent with the elements contained in this section, and if you cannot get it to power your ANAFI, you must hard reset your battery: plug it to a power source with the enclosed cable, then keep the battery's power button pressed for 15 seconds (regardless of the behavior of the LEDs), and release the button.

The battery's LEDs flash quickly, one after the other, alternating green and red: the hard reset is successful!

MEDIA RETRIEVAL

Your ANAFI is equipped with a 16GB microSD card which enables you to record videos and photos, and to transfer them easily to your computer. This section explains how to extract the microSD card from ANAFI, how to retrieve your media from the microSD card, and how to reinstall it in the drone.

Extracting the microSD card

To extract the microSD card from ANAFI, the battery must be removed from the drone. Refer to the *"Battery removal"* section of this guide for details.

When you remove the battery from the body of the drone, you uncover the microSD slot, which is protected by a small metal lock.

Slide this metal lock with a finger toward the back of ANAFI to open it – you will feel a slight click. Lift the front part of the lock to open the slot. Reach the microSD card and extract it. An open lock icon and an arrow, located on the left of the microSD slot, confirm to you the way you must slide the lock to open it.

Retrieving photos and videos

Use the enclosed microSD to SD card adapter to transfer videos and photos you have taken with ANAFI to your computer. Slide the microSD card into the adapter and use the adapter how you would use any other SD card: access your videos and photos through a card reader or the SD card slot of your computer. Copy your videos and photos to the hard drive of your computer to edit, store, and manage your media.

- ⚠ The enclosed 16GB microSD card enables you to record just over 20 minutes of 4K video. For this reason, Parrot recommends you backup your photos and videos, and you empty your 16GB microSD card after each flight, to ensure you always have available memory space to capture new still or moving images.

Installing the microSD card

To install the microSD card back into its slot, open the metal lock as you did when you extracted the card from ANAFI. Position the microSD card into its keyed slot: make sure the metal contacts of the card are facing down and set on the contacts of the drone. The shortest side of the microSD card should be facing toward the back of the drone.

Tilt the metal lock over the microSD card. Press a finger gently on the lock and slide it toward the front of ANAFI to close and lock it – you will feel a slight click. A closed lock icon and an arrow, located on the right of the microSD slot, confirm to you the way you must slide the lock to close it.

ANAFI

Compatible microSD cards

The following microSD cards have been tested extensively by Parrot teams and are fully compatible with **ANAFI**'s latest firmware versions:

SanDisk	Extreme	32GB
SanDisk	Extreme	64GB
SanDisk	Extreme	128GB
SanDisk	Extreme Plus	16GB
SanDisk	Extreme Plus	64GB
SanDisk	Extreme Plus	128GB
SanDisk	Extreme Pro	32GB
SanDisk	Extreme Pro	128GB
SanDisk	Industrial	16GB
SanDisk	Ultra	32GB
SanDisk	Ultra	64GB
SanDisk	Ultra	128GB
SanDisk	Ultra	256GB
Verbatim	Premium	32GB


Refer to Parrot online documentation for an updated list of compatible microSD cards.

INTRODUCING FREEFLIGHT 6


The HUD (head-up display) interface of FreeFlight 6 is the ultimate companion to ANAFI. It enables you to access all the outstanding features of ANAFI, from the screen of your device, at the touch of your thumbs.

This section explores FreeFlight 6 functions, starting with a presentation of the top and bottom bars of the HUD (iOS and Android).

Access the HUD by tapping "FLY" on the bottom right of the homepage of FreeFlight 6.

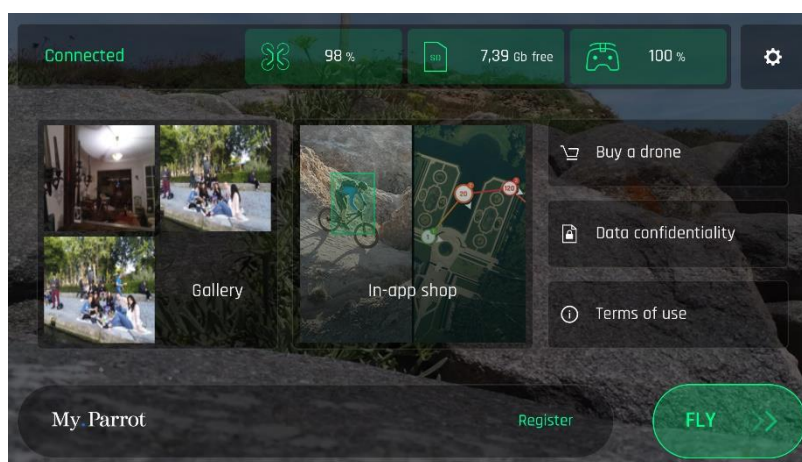


iOS FreeFlight 6 homepage

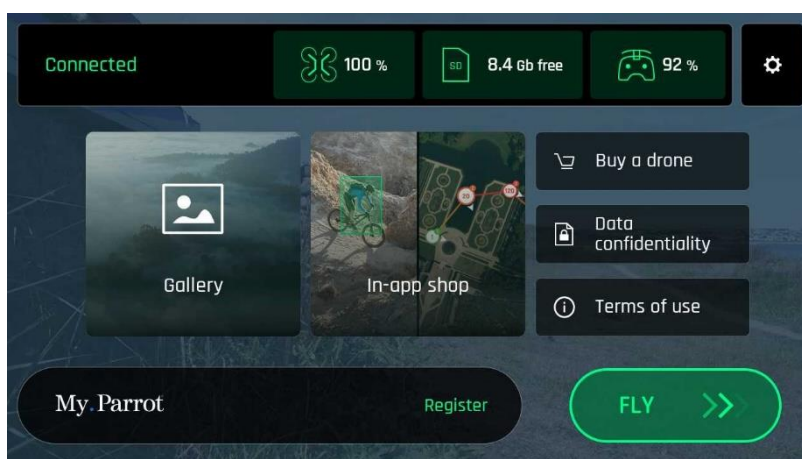

Android FreeFlight 6 homepage

ANAFI

Presentation of the iOS HUD (video mode view)

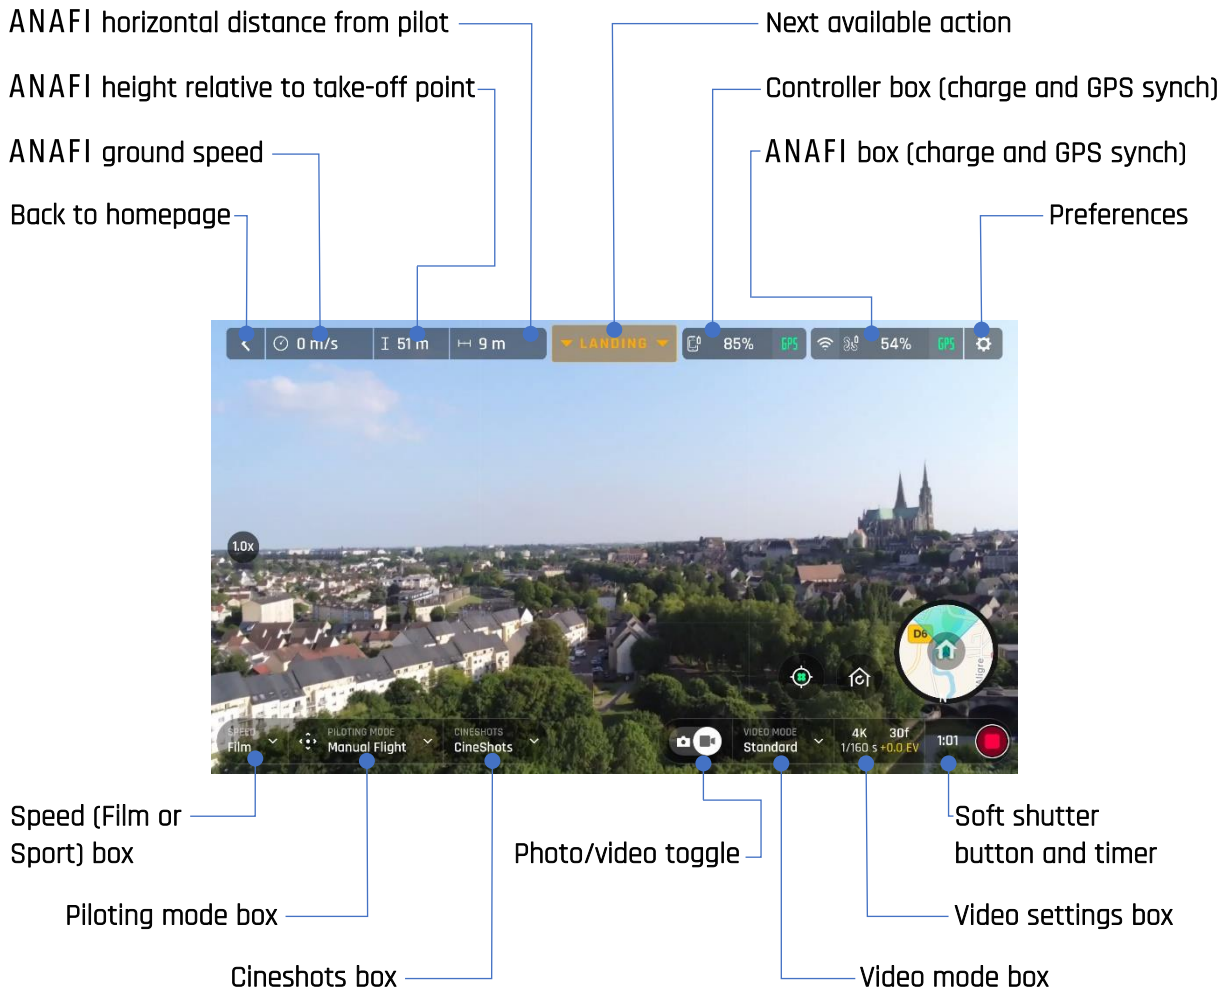

ANAFI and FreeFlight 6 are packed with features which are accessible from the HUD. Before we present the "PREFERENCES" menu of FreeFlight 6, here is an overview of your drone's current piloting, Cineshots, Dronies, and video modes.

Piloting modes:	Manual flight	Cineshots:	360° (left & right)
	Cameraman		Reveal (30 & 60m)
	Follow Me (in-app purchase)		Rise (30 & 60m)
	Smartdronies		Epic (30 & 60m)
	Touch & Fly		
	Flight Plan (in-app purchase)	Smartdronies	Dolly Zoom
			Boomerang
Video modes:	Standard	Follow Me (in-app purchase)	Boomerang
	Cinema		Orbit
	Hyperlapse		Parabola
	High-Framerate		
	Slow Motion		Dronies

The Android HUD of **FreeFlight 6** displays strictly the same information, buttons, toggles, and menus as the iOS HUD, in the same way - despite slight cosmetic differences.

- ⚠ **Note that both GPS icons are green, on both screen captures (iOS and Android screen presentations). This means that the drone's controller (Skycontroller 3 or device) and ANAFI are both synchronized to enough GPS and Glonass satellites to optimize the stability of the drone, especially at higher altitudes.**

Parrot therefore recommends you always check both your FreeFlight 6 HUD's GPS icons are green (and not red), before you make your ANAFI take off.

Presentation of the Android HUD (photo mode view)



ANAFI's photo modes currently include a Single shot mode, and a Timer mode.

The Android HUD of FreeFlight 6 displays strictly the same information, buttons, toggles, and menus as the iOS HUD, in the same way - despite slight cosmetic differences.

⚠ Note that both GPS icons are green, on both screen captures (iOS and Android screen presentations). This means that the drone's controller (Skycontroller 3 or device) and ANAFI are both synchronized to enough GPS and Glonass satellites to optimize the stability of the drone, especially at higher altitudes.

Parrot therefore recommends you always check both your FreeFlight 6 HUD's GPS icons are green (and not red), before you make your ANAFI take off.

PREFERENCES

Access **FreeFlight 6** preferences through the icon on the extreme right of the top bar of the homepage, or that of the HUD. Preferences enable you to fine-tune **ANAFI** to your hand – to customize it, to fit your piloting and filming styles.

Access **Preferences** submenus from the boxes on the left of the screen. Tap a box to select it and access its items.

For all items, **default values (DV)** are marked in **bold characters**.

Interface

The Interface preferences set the way your controller behaves and the amount of information you want on your **FreeFlight 6** HUD. It also enables you to activate the “Hand-launch” option.

Tap an item option to select it.

- Control mode: **DEFAULT** / SPECIAL
- Inverse jogs **OFF** (white) / ON (green)
- Show minimap NEVER / WITH CONTROLLER / **ALWAYS**
- Map type ROADMAD / SATELLITE / **HYBRID**
- Hand-launch **NO** / YES
- Show framing grid **NO** / YES

Tap “RESET ALL INTERFACE PREFERENCES” on the bottom of the page to reset preferences.

Piloting

Piloting preferences set the way **ANAFI** behaves, in each individual speed mode. Tap “FILM” or “SPORT” to select the speed mode you want to set.

For each item, move the slider to select a value – or tap your selection with regards to Banked turn.

- Max inclination: 5° to 40° (DV: **10°** for **FILM**; **25°** for **SPORT**)
- Max inclination speed 80°/s to 300°/s (DV: **80°/s** for **FILM** and **SPORT**)
- Max vertical speed 0.5m/s to 4m/s (DV: **1m/s** for **FILM**; **2m/s** for **SPORT**)
- Max rotation speed 10°/s to 200°/s (DV: **10°** for **FILM**; **30°** for **SPORT**)
- Max camera tilt speed 1°/s to 180°/s (DV : **10°** for **FILM**; **20°** for **SPORT**)
- Banked turn NO / YES (DV: **YES** for **FILM**; **NO** for **SPORT**)

About Banked turn: activate **Banked turn** to achieve smoother turns. This setting is especially useful for filming.

Tap “RESET ALL PILOTING PREFERENCES” on the bottom of the page to reset preferences.

ANAFI

- ⚠ Note that “Max inclination”, “Max inclination speed” and “Max vertical speed” values are the ones which carry the biggest impact on ANAFI’s acceleration and general flying behavior. Corresponding sliders turn to orange instead of green to warn users the settings they have selected require extreme care, superior piloting skills, or both, when flying ANAFI. Your drone will always remain outstandingly responsive, but with extreme settings, it will accelerate much more rapidly than you can imagine: you have been warned!

Safety

Through Safety preferences, you can set a safe and clear flying area for ANAFI.

Set ANAFI’s maximum flight altitude with the “Max altitude” slider. **This setting is always activated, regardless of the activation of the Geofence.**

To set a maximum distance from the pilot for your drone, move the “Max distance” slider to the required value, then tap YES to activate the Geofence. **When the Geofence is activated, ANAFI will automatically stop when it reaches the maximum distance you have selected.**

- Max altitude 0m to **150m**
- Max distance 10m to 2000m (DV: **100m**)
- Geofence **NO** / YES

Tap “RESET ALL SAFETY PREFERENCES” on the bottom of the page to reset preferences.

Camera

Camera preferences enable you to select camera options, both in photo and video modes.

- Camera calibration Tap the “CALIBRATE” box to proceed
- Autorecord from take-off NO/ **YES** (video only)
- Lossless zoom only **NO** / YES (video only)
- Timer 3 secs / **5 secs** / 10 secs (photo only)
- Hyperlapse speed **x15** / x30 / x60 / x120 (video only)
- Anti-flickering OFF / **AUTO** / 50Hz / 60 Hz

About camera calibration: only resort to this procedure if you notice your videos and photos are systematically tilted on the same side. Refer to the “*Camera calibration*” section of this guide for the detailed procedure.

About Anti-flickering: this setting and the associated technology aim at eliminating the flicker effect which can arise due to some artificial lights. The “AUTO” option should work for most users, but depending on your country, you can try other settings if you feel bothered by a flicker effect on your device screen, your artificial light videos, or both.

Tap “RESET ALL CAMERA PREFERENCES AND SETTINGS” on the bottom of the page to reset preferences.

Network

Network preferences let you change your **ANAFI**'s Wi-Fi network name, password, and band.

- Network's name Tap the field to change your **ANAFI**'s network name
- Password Tap the box to change your network's password
- Wi-Fi band ALL / 2.4 GHz / 5 GHz / MANUAL

VIDEOS AND PHOTOS

ANAFI is equipped with a state-of-the-art 4K, 3-axis-stabilized camera, which delivers astoundingly sharp motion and still pictures, through a 1/2.4" CMOS 21MP sensor.

The lens of the camera includes low dispersion aspherical elements, that reduce chromatic aberrations and flare, and guarantee optical excellence to such a small, smart and versatile airborne imaging system.

Although you can film and take pictures using your device as ANAFI's only controller, we recommend you always use the Parrot Skycontroller 3 and your device, for the best controlled, most precise, and safest filming and photos-shooting flights.

Making videos


By default, ANAFI and FreeFlight 6 are set to start recording a video as soon as ANAFI takes off. This literally means all you have to do, to start filming, is to fly ANAFI into the sky!

However, depending on your filming objectives, ANAFI and FreeFlight 6 offer a wealth of settings, from full auto to manual professional options, for you to make the most of every situation.

If required, tap the photo/video toggle in the middle of the bottom bar of the HUD, to circle the film camera (right icon) in white.

Main filming options are twofold, and accessible from the HUD of FreeFlight 6.

- **First**, select a **video mode** by tapping the corresponding box of the HUD. The options appear on your device, as they do on the screen capture below. Tap a video mode to select it and tap the **video mode** box again to confirm your choice.

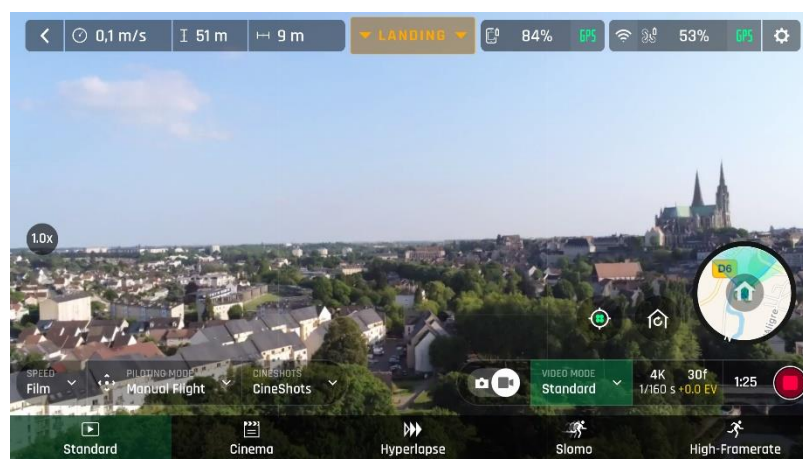

iOS Video mode menu

- **Second**, select a **video resolution and a framerate (fps - frames per second) value** from the corresponding box of the HUD. Tap the **video settings box** to call the individual **video resolution and fps** boxes.

Tap the **video resolution box** to access the available video resolutions and tap one to select it.

Tap the **fps box** to access the available fps values and tap one to select it.

Tap the **video settings box again** to close the sub-boxes and confirm your choices.

Available video resolutions and fps values depend on the video mode you have selected:

Standard:	all-round 4K or 1080p filming, at 24, 25 or 30fps .
Cinema:	spectacular 4K cinema filming, at 24fps .
Hyperlapse:	time-lapse video with a configurable speed factor, in 4K or 1080p , exported at 24, 25 or 30fps - set the speed factor from the <i>"Camera"</i> menu of <i>FreeFlight 6 "PREFERENCES"</i> (refer to the <i>"PREFERENCES - Camera"</i> section of this guide for further information).
Slow-Motion	1080p filming at 48, 50 or 60fps , automatically slowed down by a factor of 2 and exported at 24, 25 or 30fps.
High-Framerate:	1080p filming at 48, 50 or 60fps (ideal for post-processing).

In the following screen capture, **Standard video mode** is activated: available video resolutions are **4K (UHD)** and **1080p (FHD)** – either in **24, 25** or **30fps**, which you would find out by tapping "24 fps" on the bottom right of the screen.



iOS Standard video format menu

When you are happy with your settings and your framing, press the hard shutter button on the right of **Parrot Skycontroller 3** (or tap the soft shutter button of the HUD) to start filming.

The soft shutter button of the HUD animates and displays a cycle between red square, and red circle. The timer starts running.

Press the hard shutter button of the controller (or tap the soft shutter button of the HUD) again to end the recording. The soft shutter button of the HUD comes back to steady, red and round. The timer resets.

Taking photos

To access the photo camera of ANAFI, tap the photo/video toggle in the middle of the bottom bar of the HUD, to circle the photo camera (left icon) in white.

Two photo modes are currently available on ANAFI: single shot and timer.

In addition, thanks to its 21MP CMOS sensor, ANAFI produces two main picture formats:

- **rectilinear JPEG** (up to 16MP);
- **wide 21MP JPEG and DNG** (Digital NeGative: Adobe open standard RAW format).


Main photography options are accessible from the HUD of FreeFlight 6.

- **First**, select a **photo mode** by tapping the corresponding box of the HUD. The options appear on your device. Tap a photo mode to select it and tap the **photo mode** box again to confirm your choice.

When the “Single” mode is selected, the soft shutter button of the HUD appears as a full white circle.

When the “Timer” mode is selected, the soft shutter button of the HUD appears as a digit (representing a timer ready to countdown) inside a white circle. By default, the timer is set on 5 seconds. You can change this value from the “Camera” menu of **FreeFlight 6** “PREFERENCES”(refer to the “PREFERENCES - Camera” section of this guide for further information).

- **Second**, select a **photo format** from the corresponding box of the HUD. Tap the **photo settings** box to call the **photo settings** boxes. Tap the **last box on the right** of the screen to access the **available photo formats**. Tap a format (JPEG RECT, or JPEG WIDE, or DNG+JPEG) to select it. Tap the photo settings box again to close the sub-boxes and confirm your choice.

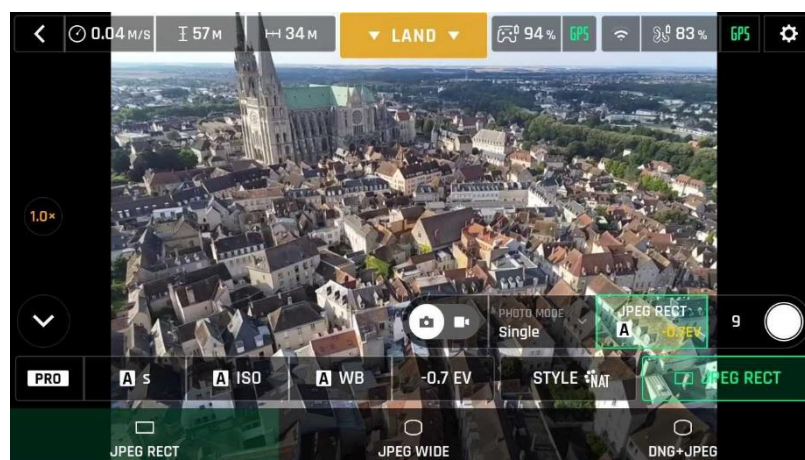

Android photo formats: JPEG RECT



Android photo formats: DNG+JPEG

When you are happy with your settings and your framing, press the hard shutter button on the right of the **Parrot Skycontroller 3** (or tap the soft shutter button of the HUD) to take a photo.

In "Single" mode, the screen flashes white to confirm a picture has been taken.

In "Timer" mode, the timer of the soft button of the HUD countdowns, then the screen flashes white to confirm a picture has been taken. The timer of the soft shutter button resets.

ANAFI photo formats:

- JPEG RECT: 4:3 aspect ratio, up to 16MP and 75.5° horizontal field of view (HFOV)
- JPEG WIDE: 4:3 aspect ratio, 21MP, 84° HFOV – zoom is disabled for this format
- DNG+JPEG: 4:3 aspect ratio, 21MP, 84° HFOV – zoom is disabled for this format

⚠ The DNG+JPEG option produces 2 files (1 DNG, 1 JPEG) for each shutter action. As other RAW picture formats, DNG is a very useful format for professional photography processing and workflow. Indeed, RAW formats retain all the information gathered by photography sensors, contrary to JPEG formats – which are compressed and processed renderings of this comprehensive information. In consequence, RAW pictures such as ANAFI's DNG are heavy files, but they offer the very best post-processing and retouching possibilities.

GIMBAL TILT AND ZOOM CONTROLS

Two of ANAFI's main assets are its gimbal tilt control capabilities (180°, from the ground to the sky), and its zoom. This section presents these features and the way to activate them.

Gimbal tilt control

ANAFI's gimbal tilt control is activated through the left trigger of Parrot Skycontroller 3. It is available in all video and photo modes, and in all manual piloting modes.


- To aim the gimbal toward the ground, push the tilt control trigger down.
- To aim the gimbal toward the sky, pull the tilt control trigger up.
- To reset the gimbal tilt to a horizontal position, press the optics reset button on the left of Parrot Skycontroller 3 (this action also resets the zoom factor of the lens to x1).

Zoom control


ANAFI's zoom control is activated through the right trigger of Parrot Skycontroller 3. It is available in all video modes, and in JPEG RECT photo mode (with an impact on the final resolution of your pictures). WIDE photo modes imply the use and rendering of all 21MP delivered by ANAFI's CMOS sensor: zoom is deactivated in both WIDE photo modes.

- To zoom in on a subject, push the zoom trigger down.
- To zoom out, pull the zoom trigger up.
- Pressing the optics reset button on the left of Parrot Skycontroller 3 instantly resets the zoom factor of the lens to x1 (this action also resets the gimbal tilt to a horizontal position).


The HUD of FreeFlight 6 presents precise, decimal-by-decimal zoom information at all times, in the middle of the left side of the screen, as shown on the following screen captures - note that in these examples, ANAFI's gimbal is tilted all the way toward the ground.

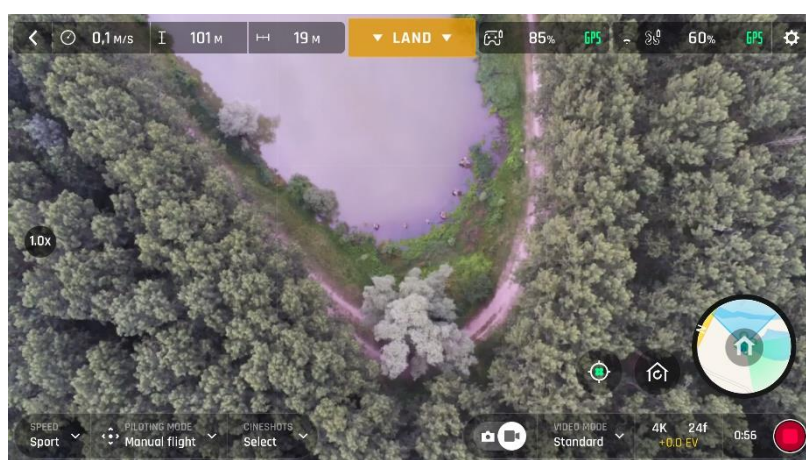

iOS 4K x1 zoom

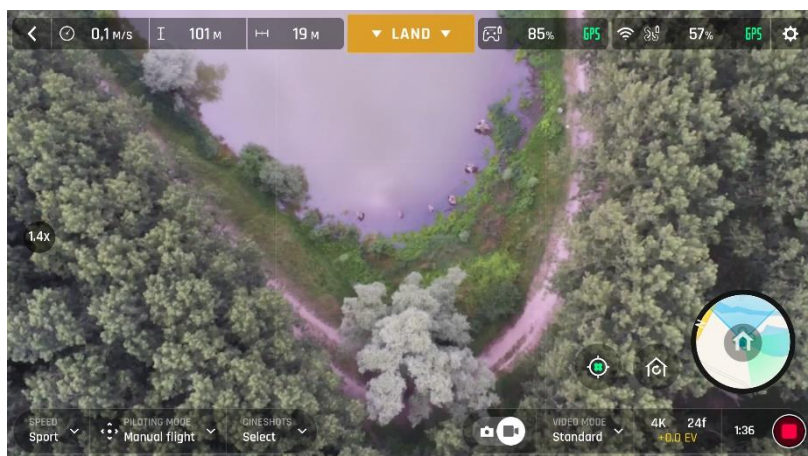

iOS 4K x1.4 zoom

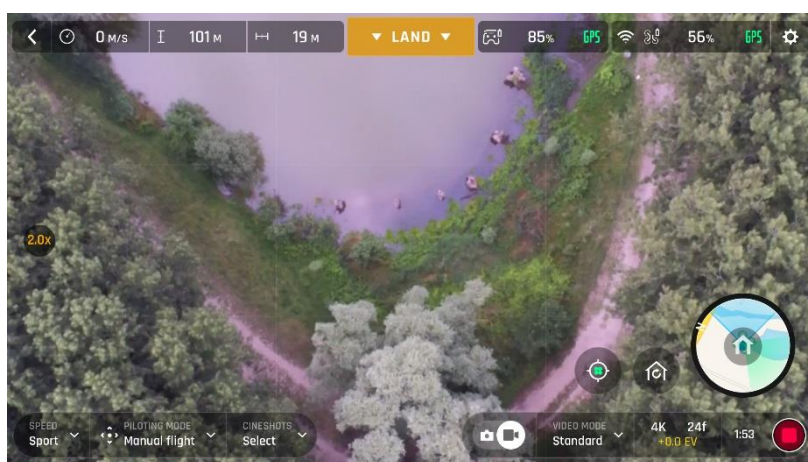

iOS 4K x2 zoom

As already mentioned, **ANAFI** presents no lossless zoom capabilities for pictures: the zoom is deactivated by design in WIDE formats (JPEG and DNG+JPEG), and it has an impact on the resolution of the pictures in JPEG RECT format.

By contrast, **ANAFI** offers impressive lossless zoom capabilities for 4K UHD (x1.4) and 1080p (X2.8) videos.



Android 1080p x1 zoom



Android 1080p x1.8 zoom



Android 1080p x2.8 zoom



Android 1080p x3 zoom

Note that in video mode, when you leave the lossless envelope of the zoom, the zoom indicator, on the middle left of the HUD, turns orange instead of white.

Camera Calibration (exceptional procedure)

- ⚠ **Your ANAFI's camera has been factory-calibrated with unparalleled precision.** Unlike the calibration of **ANAFI** or that of the **Parrot Skycontroller 3**, which must be carried out periodically, **the camera (or gimbal) calibration must not be carried out unless it appears necessary** - typically, after a crash. If you notice **a tilted horizon on all your videos and photos**, and if this **tilt is always on the same side**, access camera calibration to make your horizon perfectly straight again.

This feature is accessible from the **ANAFI** box on the **FreeFlight 6** homepage (or from the **ANAFI** box of the HUD) and from the *"PREFERENCE - Camera"* menu.

Before starting this procedure, you need to position **ANAFI** on a flat and perfectly level surface, exactly perpendicular to any pattern containing straight lines you can use as horizon references. A set square can help you check that a line on your floor is perpendicular to your wall, as on the following pictures.



Finding a line perpendicular to the wall




ANAFI ready for camera calibration

ANAFI

When **ANAFI** is correctly positioned, perpendicular to its straight horizon reference, power it on, along with the **Parrot Skycontroller 3** and your device, as you would for any flight.

Access "Camera calibration" from the **ANAFI** box of the homepage or the HUD of **FreeFlight 6**, or from the "PREFERENCES-Camera" menu.

Tap "CAMERA CALIBRATION" (**ANAFI** box) or "CALIBRATE" (Camera preferences menu). The following screen appears.

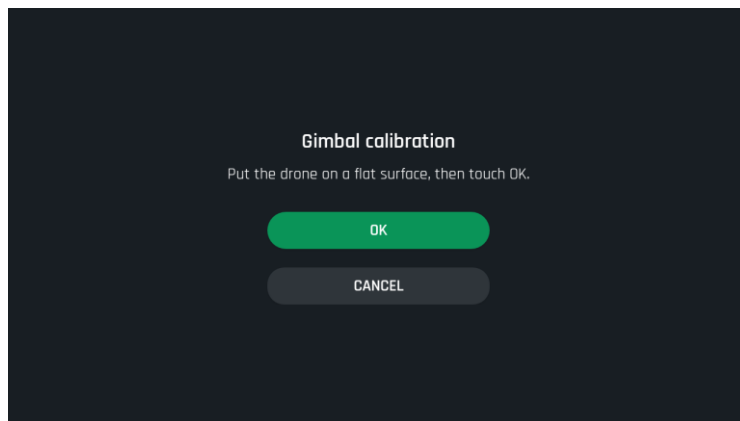


ANAFI: gimbal/camera calibration (Android)

Tap "OK" to access calibration. The following screen appears.



Gimbal/camera calibration: before (Android)

Tap "-" or "+" until the artificial horizon of **ANAFI** matches the horizon reference facing the drone. **Do not worry about vertical lines: as you can see from the screenshots, they do not appear straight or parallel on the gimbal calibration screen.**

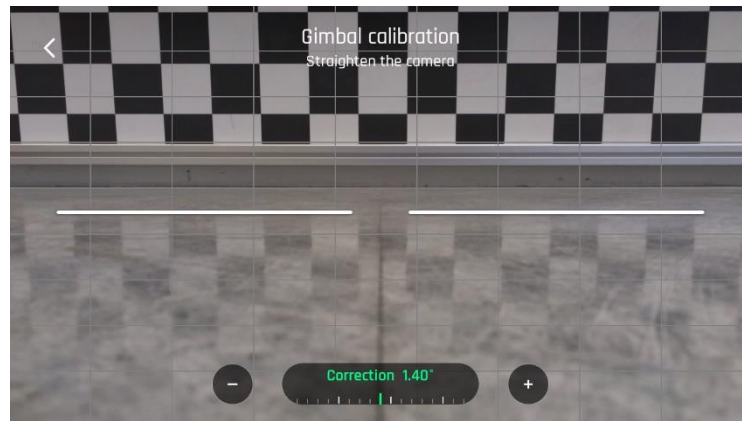

Gimbal/camera calibration: after (Android)

When you have straightened the tilt of the camera, tap the "<" icon on the top left of the screen to confirm your setting and exit camera calibration.

PRO IMAGING SETTINGS

ANAFI is set to deliver high quality and balanced 4K videos and 21MP photos, out of the box.

Some image enthusiasts and all professional directors, videographers and photographers, however, will find their way through pro imaging settings. This section is designed to help you exploit manual settings and develop your filming and photography styles.

The Exposure value (EV) is the only setting accessible in the Auto mode, from the "Video/Photo settings box" menu of the HUD.

Exposure value (EV)

The EV expresses the general darkness or lightness of a photograph – or a video. At +0.0 (zero) EV, ANAFI automatically adapts the shutter speed and the ISO value to deliver a perfectly balanced photo or video: not too dark and not too light.

Tap the "+0.0 EV" box to activate the EV slider.

Slide your finger on the screen to adapt your EV toward negative values and darken your picture or video.

Use positive values to lighten your images. This can be useful if you want to capture a backlit scene and to fade surroundings in light.



Android -1.0 EV



Android +1.0 EV

To activate further settings, tap "Auto", on the far left of the Video/Photo settings box. The additional settings boxes are unlocked, they stand out in white and "Auto" has been replaced with "Pro".

Shutter speed (s)

The “s” value refers to the time, in fraction of second, when the shutter stays open to capture a still picture: it is called exposure time.

In Auto mode, **ANAFI** selects the best shutter speed and ISO value couple, in real time, depending on the scene and available light. In consequence, selecting a shutter speed also deactivates the Auto ISO mode.

As **ANAFI**'s f/2.4 aperture lens lets a lot of light in, even compared to most professional SLR lenses, your drone can achieve very fast “s” values (down to 1/10000s) and capture very fast action. It can also be used for slow shots, up to 1 second for the photo mode.

Note that **ANAFI** can shoot pictures and videos when it is not flying. You can even hold it in your hand and use it as a premium stabilized 4K video and photo camera.

Tap the “s” box to open the shutter slider.

Select a value to exit the auto-mode for shutter speed and ISO. This action also deactivates the EV slider.

Set the s value you require, then tap the “ISO” box to select an ISO value. Experiment! The display of the HUD reflects your settings. If you get lost, tap Auto either on the “s” or the “ISO” slider to get back to auto exposure and reactivate the EV slider.

ISO value (ISO)

The ISO value refers to the sensitivity of the sensor. As we have seen, it is linked to the shutter speed value: both sliders activate when you deactivate the “Auto” mode and set a value for one, or for the other. The lower the ISO value, the lower the sensitivity of the sensor, and the lower the image noise (digital grain). Therefore, under good lighting conditions, such as sunny daylight outside shots, low ISO values (100 or 200) should always be selected. The sensitivity of the sensor increases as the ISO value goes up: 3200 ISO can be used to capture low light interior scenes, or exterior shots at dusk or dawn, for example.

By default, in Auto mode, **ANAFI** constantly adapts its ISO and shutter speed values to the scene it is filming. Setting an ISO value for a whole shot or series of shot, however, is very useful to professional filming.

Tap the ISO box to open the shutter slider.

Select a value to exit the Auto mode for ISO and shutter speed. This action also deactivates the EV slider.

Set the ISO value you require, then tap the “s” box to select a shutter value. Experiment! The display of the HUD reflects your settings. If you get lost, tap Auto either on the “s” or the “ISO” slider to get back to auto exposure and reactivate the EV slider.

White balance (WB)

White balance deals with the color temperature of the light. Cold lights make the whites look blue. Warm lights make the whites look yellow. By default, in Auto WB mode, **ANAFI** keeps the whites white, at all times; it adapts its WB value in real time.

However, setting a WB value for an entire shot is especially useful for professional filming; stable WB facilitates the grading (color treatment) of videos.

Tap the WB box to open the white balance options.

Select the WB option that is best suited for your shooting conditions, your subject, or **both**. The display of the HUD reflects your settings and helps you make the best choice.




iOS Auto WB




iOS Tungsten WB



iOS Incandescent WB

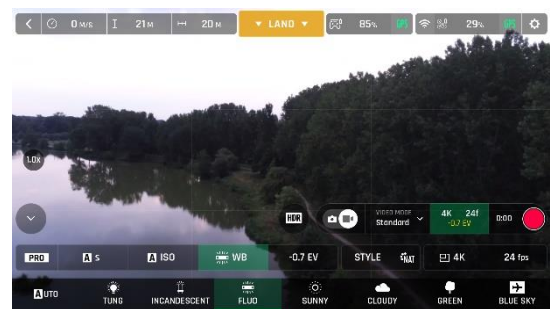



iOS Fluorescent WB

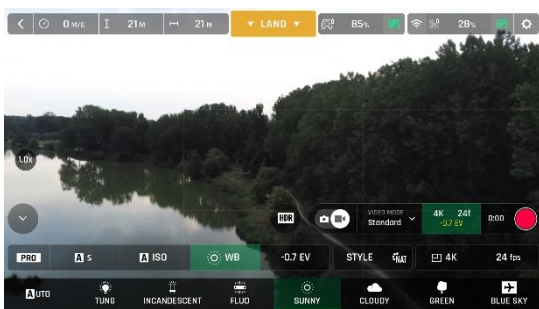

iOS Sunny WB



iOS Cloudy WB

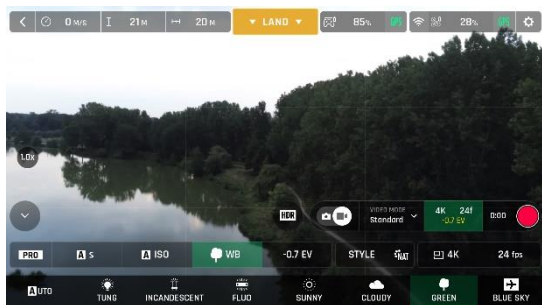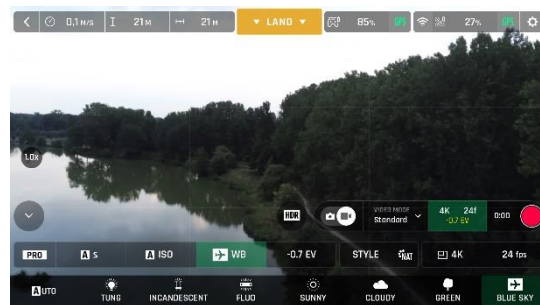*iOS Green WB**iOS Blue Sky WB*

HDR

HDR (high dynamic range) is another great way to enhance a video. The HDR option is only available for Standard video mode 4K formats (regardless of framerate values).

To activate the HDR option, select the Standard video mode and 4K filming from the relevant boxes of the bottom bar of the HUD. A white and round HDR icon appears on the screen of your device, to the left of the photo/video trigger.

Tap this icon: it turns green and a HDR notice appears in black inside a yellow box, on the right side of the screen. Press the hard shutter button on your Parrot Skycontroller 3 (or the soft shutter button of the HUD) to start filming in HDR.

Tap the round HDR icon again to deactivate HDR. The yellow HDR box disappears from the screen.

*iOS HDR off**iOS HDR on*

Note that activating (or deactivating) HDR stops any ongoing recording.

P-LOG

An alternative Style to Natural looking images (default value) can be selected for ANAFI both in video mode, and in photo mode. This alternative Style is called "P-LOG". It makes images a little less contrasted: P-LOG style is ideal for videos you want to edit and process using professional grading tools and filters.

Activate the "P-LOG" Style from the "Style" box of the Video/Photo settings menu.

To revert your selection back to Natural, select "Natural". Try shooting the same scene with both settings to find out which one works best for you.

CINESHOTS

ANAFI features a series of automated shots, which enable you to capture scenes professionally.



Android Cineshots Menu

Make sure you have selected the videos settings you require, check that you are filming and tap "CINESHOTS" in the bottom bar of the HUD to access Cineshots. Tap a Cineshot to select it. For each, two options appear.

360°

The 360° Cineshot is self-explanatory: when it is activated, **ANAFI** maintains its position and altitude, and rotates slowly and completely around its axis to uncover a full panorama.

Tap "Right" or "Left" to select the direction you want your drone to rotate, and to activate the 360°. After 4 seconds, **ANAFI** starts its rotation. An animation flashes on the screen of your device, and the "360°" box progressively fills with green as the Cineshot unfolds.

Reveal

The Reveal Cineshot is a classic motion picture opening shot: when it is activated, **ANAFI** tilts its camera toward the ground and starts moving forward in a straight horizontal line. Slowly, over 30 or 60 meters, the camera gimbal tilts up, revealing the scenery in front of **ANAFI**.

Before you activate the Reveal Cineshot, check the area in front of **ANAFI** is clear from obstacles, and safe.

Tap "30m" (small-arrow icon) or "60m" (large-arrow icon) to select the range of your Reveal shot, and activate it. After 2 seconds, **ANAFI** tilts its camera down and starts moving forward. An animation flashes on the screen of your device, and the "Reveal" box progressively fills with green as the Cineshot unfolds.

Rise

The Rise Cineshot is perfect to unveil your surroundings – or that of any object on the ground. When it is activated, **ANAFI** tilts its camera to the ground and starts moving up, in a straight vertical line. Slowly, as it climbs to 30 or 60 meters, the camera tilts up and **ANAFI** starts rotating around its axis to pan over the full scenery.

Before you activate the Rise Cineshot, check the area beyond ANAFI is clear from obstacles, and safe: do not activate the Rise Cineshot under trees, or a bridge, for example.

Tap “30m” (small-arrow icon) or “60m” (large-arrow icon) to select the range of your Rise shot, and activate it. After 2 seconds, **ANAFI** tilts its camera down and starts moving up. An animation flashes on the screen of your device, and the “Rise” box progressively fills with green as the Cineshot unfolds.

Epic

The Epic Cineshot offers another great way to dramatize any scene or location. When it is activated, **ANAFI** moves away backward in a smooth ascending line, keeping its subject in the center of its frame for 30 or 60 meters. The Epic Cineshot gives best results when **ANAFI** starts from a close-up position, relative to its subject.

Before you activate the Epic Cineshot, check the area behind ANAFI is clear from obstacles, and safe.

Tap “30m” (small-arrow icon) or “60m” (large-arrow icon) to select the range of your Epic shot, and activate it. After 2 seconds, **ANAFI** starts moving backward and upward. An animation flashes on the screen of your device, and the “Epic” box progressively fills with green as the Cineshot unfolds.

- ⚠️ Activate and monitor all Cineshots with care: always check your automated shot flight plan is clear from obstacles and safe, always retain visual contact with ANAFI, and always be ready to reclaim control of your drone: any action on any stick of Parrot Skycontroller 3 immediately terminates the current Cineshot.**

If you have feedback or comments about the v1.3.2 of this user guide, please reach out to:

technical.writer@parrot.com