

The HLMU Series is a universal voltage, encapsulated, 3-phase voltage monitor. It continuously measures the voltage of each of the three phases with microcontroller accuracy and compares the value to preset trip points. It separately senses phase reversal and loss; over, under and unbalanced voltages; and over or under frequency. Protection is assured during periods of large average voltage fluctuations, or when regenerated voltages are present. The unit trips within 200ms when phase loss is detected. Adjustable time delays are included to prevent nuisance tripping and short cycling of sensitive equipment. The isolated, 10A, DPDT relay contacts trip when a phase voltage exceeds the trip limits for the trip delay. Nominal line voltage, voltage unbalance, and time delays are knob adjustable. The phase loss setpoint and the acceptable frequency range are fixed. Both delta and wye systems can be monitored; no connection to neutral is required.

For more information see:

Appendix B, page 166, Figure 17 for dimensional drawing. Appendix C, page 168, Figure 12 for connection diagram.

Upon application of line voltage, the output is de-energized and the restart delay begins. If all the three-phase voltages are within the acceptable range, the output energizes at the end of the restart delay. The microcontroller circuitry automatically senses the voltage range, and selects the correct operating frequency (50 or 60Hz). The over and under  $voltage\ trip\ points\ are\ set\ at\ \pm\ 10\%\ of\ the\ adjusted\ line\ voltage\ . When\ the\ measured\ value\ of\ any\ phase\ voltage\ exceeds\ the\ points\ are\ set\ at\ \pm\ 10\%\ of\ the\ adjusted\ line\ voltage\ . When\ the\ measured\ value\ of\ any\ phase\ voltage\ exceeds\ the\ phase\ p$ acceptable range limits (lower or upper) the trip delay begins. At the end of the trip delay the output relay de-energizes. If the phase voltage returns to an acceptable value before the trip delay expires, the trip delay is reset and the output remains energized. Under, over, and unbalanced voltages plus over or under frequency must be sensed for the complete trip delay before the unit trips. The unit trips in 200ms when phase loss or reversal are sensed. The unit will not energize if a fault is sensed as the line voltage is applied.

Reset: Reset is automatic upon correction of the voltage or frequency fault or phase sequence.

### Restart Delay Options:

L= Lockout or minimum OFF time. The restart delay begins when the output trips. The unit cannot be re-energized until the restart delay is complete. This provides a minimum off time or lockout time to allow equipment sensitive to short cycling, time to reset. If the fault is corrected after the restart delay is complete, the output energizes immediately. The restart delay also occurs when line voltage is applied/reapplied.

R= Restart Delay on fault correction. The restart delay begins when line voltage is reapplied or when a voltage fault is corrected. This option is normally selected when staggered restarting of multiple motors on a power system is required.

N= No Restart Delay. 0.6 second initialization delay on application of line voltage applies.

All restart options remain reset when the following conditions are detected:

1.) Phase loss (phase unbalance greater than 25%) 2.) Average line voltage less than 120VAC 3.) Phase reversal

The restart delay begins when the condition is corrected.

red/green if phase reversal is sensed. If a fault is sensed during the restart delay, the LED will glow red during that portion or the full restart delay.

### Order Table: **HLMU**

Output **-D** - DPDT -S - SPDT

**Restart Function** L - Lockout, Min Off Time

R - Staggered Restarting
N - No Restart Delay

± 15%

Tolerance.

Voltage Unbalance -A - Adjustable 2-10% -Fixed - Specify Unbalance 2-10% in 1% increments. using two digits [04]

Trip Delay -A - Adjustable 1-30s Fixed - Specify delay 1-30s in 1s increments. using two digits [05]

**Restart Delay** -**A\*** - Adjustable 0.6-300s

-N - No Ŕestart Delay \*Selection "A" is only available for Restart Functions "L" and "R'

Features:

 Compact design • Finger-safe terminal blocks, up to 12 AWG

• Protects against phase loss & reversal; over,

• Isolated, 10A, DPDT output contacts

· LED indicates relay status, faults, & time

• Universal line voltage 200 to 480VAC in

under & unbalanced voltages; & over &

ASME A17.1 rule 210.6

one unit

under frequency

• Encapsulated circuitry

• NEMA MG1 14:30, 14:35

• IEEE C62.41-1991 Level B

## **Auxiliary Products:**

• 3-Phase fuse block/disconnect: P/N: FH3P

2 Amp fuse: P/N: P0600-11 DIN rail: P/N: C103PM (Al)

• DIN rail adaptor: P/N: P1023-20

### **Available Models:**

HLMUDLAAA HLMUDRAAA HLMUDN0405N HLMUSR0604A HLMUDNAAN

If desired part number is not listed, please call us to


see if it is technically possible to build.

The LED flashes green during the restart delay, then glows green when the output energizes. It flashes red during the trip delay then glows red when the output de-energizes. It flashes

## **Specifications**


Line Voltage					Over/Under Frequency	±4%; Reset ±3%; 50/60 Hz
Type					Phase Sequence	
Operating Voltage		Range Voltage Adj. Range Frequency			Response Time-Phase Reversal & Phase Loss ≤200 ms	
1 0 0		240	200-240VAC	50 or 60Hz	Reset	Automatic
		380	340-420VAC	50Hz	Output	
		480	400-480VAC	60Hz	Type	Isolated Electromechanical Relay
Line Voltage Max					Form	DPDT
AC Line Frequency						10A resistive @ 240VAC; 8A resistive @ 277VAC;
Phase Loss 25% unbalance					0	NO-1/4 hp @ 120VAC; 1/3 hp @ 240VAC
Response Time≤200ms					Life	Mechanical - 1 x 10 <sup>6</sup>
Undervoltage & Voltage Unbalance						Electrical (at 10A) - DPDT - 1 x 303
Type Voltage detection with delayed trip &					Protection	,
7.1			tic reset		Surge	IEEE C62.41-1991 Level B
Overvoltage	Trip Voltage	109 - 113	3% of the adjusted line v	oltage	Isolation Voltage	
O	Reset Voltage	≅ -3% of	f the trip voltage	O	Circuitry	Encapsulated
Undervoltage	Trip Voltage 88 - 92% of the adjusted line voltage				Mechanical	*
Ü	Reset Voltage	≅ +3% o	of the trip voltage	O	Mounting	Surface mount with one #10 (M5 x 0.7) screw
Voltage Unbalance	Trip Setpoint Adjustable 2 - 10% or specify fixed			æd	Note: 0.25 in.(6.35 mm) spacing between units or other devices is required	
O	1 1	unbalar	nce of 2 - 10% in 1% incre	ments	Dimensions	3 x 2 x 1.64 in. (76.7 x 51.3 x 41.7 mm)
	Reset on Balan	ce ≅ -0.7%	unbalance		Termination	Screw terminal connection up to
Trip Delay	Active On	Over/u	ndervoltage, voltage unb	palance,		12 AWG (3.3 mm <sup>2</sup> ) wire
1 ,		over/u	nder frequency		Environmental	, ,
	Range	Adjusta	ble from 1 - 30s or specif	y fixed	Operating / Storage Temperature	40° to 60°C / -40° to 85°C
	Ü	delav 1	- 30s in 1s increments	•	Humidity	95% relative, non-condensing
	Tolerance				Weight	
Restart Delay	Range	Adjusta	ble from 0.6 - 300s; if no	restart		( 0)
,	Ü		selected a 0.6s initializat			
		applies		,		

# Appendix B - Dimensional Drawings

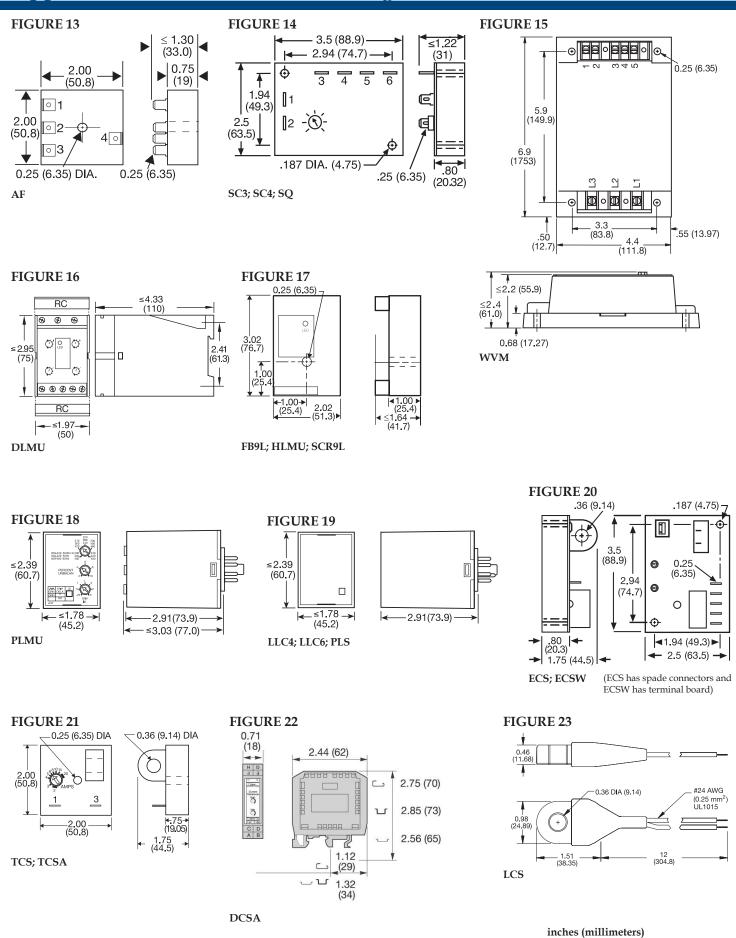


# Appendix C - Connection Diagrams

### FIGURE 1 - FSU1000 Series

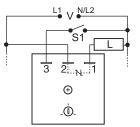

S1 = Optional low current switch V = Voltage L = Load

### FIGURE 2 - FS100 Series

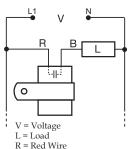

B = Black Wire

FIGURE 3 - FS100 Series

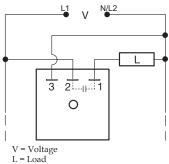


FIGURE 4 - FS200 Series

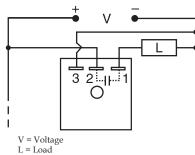


FIGURE 5 - FS300 Series


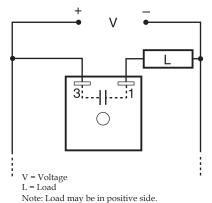


FIGURE 6 - FS400 Series

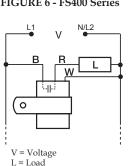

R = Red Wire B = Black Wire W= White Wire

FIGURE 7 - AF Series

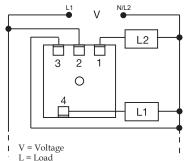


FIGURE 8 - FS500 Series



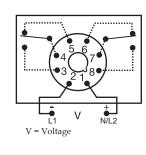


FIGURE 11 - DLMU Series

### FIGURE 9 - SC3/SC4 Series

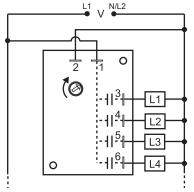

for SC3, terminal 6 & load L4 are eliminated.

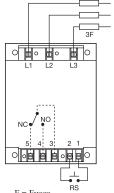


NO = Normally Open

NC = Normally Closed RS = Optional Remote Reset Switch Relay contacts are isolated.

be installed externally in series with each input. (3)

FIGURE 10 - WVM Series

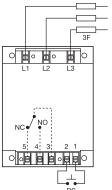

F = Fuses


CAÚTION:

2 amp max fast acting fuses must

 $\Theta$ 


L1, L2, L3 = Line Voltage Input NO = Normally Open Contact NC = Normally Closed Contact C = Common, Transfer Contact CAUTION: 2 amp max. fast acting fuses are recommended to protect the equipment's wiring. They are not required to protect the DLMU. ! = Select alarm contact connection as N.O. or N.C. when ordering; N.O. Shown.

### FIGURE 12 - HLMU Series

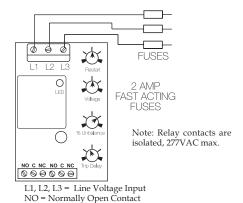

NC = Normally Closed Contact C = Common, Transfer Contact CAUTION: 2 amp max. fast acting fuses are recommended to protect the equipment's wiring. They are not required to protect the HLMU.


# FIGURE 13 -

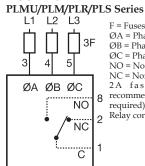

F = Fuses  $\emptyset$ A = Phase A = L1  $\emptyset$ B = Phase B = L2  $\emptyset$ C = Phase C = L3 NO = Normally Open

NC = Normally Closed 2A fast acting fuses recommended for safety (not required)

Relay contacts are isolated.

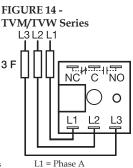

L2 = Phase B

L3 = Phase C

NO = Normally Open

NC = Normally Closed C = Common, Transfer Contact

Relay contacts are isolated. F = 2A Fast acting fuses are recommended,

but not required