	Technical data	
	General specifications	70 1000
	Sensing range Adjustment range	70 1000 mm 90 1000 mm
Mark State	Unusable area	0 70 mm
	Standard target plate	100 mm x 100 mm
	Transducer frequency Response delay	approx. 255 kHz approx. 125 ms
	Indicators/operating means	
	LED yellow	indication of the switching state
U	LED red	flashing: program function object detected "Error", object uncertain
-		in program function: No object detected
	Electrical specifications	
	Operating voltage U _B No-load supply current I ₀	10 30 V DC , ripple 10 % _{SS} ≤ 50 mA
	Input	≥ 30 IIIA
	Input type	1 program input,
		operating range 1: -U _B +1 V, operating range 2: +4 V
		+U _B input impedance: > 4.7 kΩ; program pulse: \ge 1 s
	Output	
Model Number	Output type Bated operating current I	2 switch outputs NPN, normally open/closed
UB1000-18GM75-E01-V15	Rated operating current I _e Voltage drop U _d	2 x 100 mA , short-circuit/overload protected ≤ 3 V
	Repeat accuracy	≤ 1 %
Single head system	Switching frequency f	max. 3 Hz
Features	Range hysteresis H Temperature influence	1 % of the set operating distance ± 1.5 % of full-scale value
	Ambient conditions	
• 2 switch outputs	Ambient temperature	-25 70 °C (-13 158 °F)
 Selectable sound lobe width 	Storage temperature	-40 85 °C (-40 185 °F)
 Program input 	Mechanical specifications Connection type	Connector M12 x 1 , 5-pin
Temperature compensation	Degree of protection	IP65
	Material	have a sided also a
 Very small unusable area 	Housing Transducer	brass, nickel-plated epoxy resin/hollow glass sphere mixture; foam
Diagrama	Tanoddoor	polyurethane, cover PBT
Diagrams	Mass	60 g
Characteriatia reasonana aurre	Factory settings Output 1	Switching point: 90 mm
Characteristic response curve	Calpar I	output function: Switch point operation mode
Distance Y [mm]	Output 2	output behavior: NO contact Switching point: 1000 mm
250 flat surface 100 mm x 100 mm	Output 2	output function: Switch point operation mode
200	Beam width	output behavior: NC contact wide
150	Compliance with standards and	wide
5	directives	
	Standard conformity	
-50	Standards	EN 60947-5-2:2007 IEC 60947-5-2:2007
150		
200 round bar, Ø 25 mm	Approvals and certificates	
250 0 200 400 600 800 1000 1200 1400 1600	UL approval	cULus Listed, General Purpose
Distance X [mm]	CSA approval	cCSAus Listed, General Purpose
	CCC approval	CCC approval / marking not required for products rated
↓ Y		≤36 V
wide sound lobe		
X wide sound lobe		

Release date: 2014-07-03 11:57 Date of issue: 2014-07-03 204533_eng.xml

 Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

 Pepperl+Fuchs Group
 USA: +1 330 486 0001
 G

 www.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com




UB1000-18GM75-E01-V15



Dimensions

<u>M18 x 1</u> 24 () <u>EDs</u><u>M12 x 1</u>

Electrical Connection

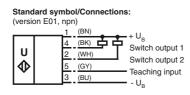

Core colours in accordance with EN 60947-5-2.

Pinout



Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)
5	GY	(gray)

Additional Information

Programmed switching output function

Switch output 1 (N.O.)	Object range	
Switch output 2 (N.C.)		
Switch point 1 -> ∞:	Switch output 1, (N.O.) Detection of object presence	
Switch point 2 -> ∞ :	Switch output 2, (N.C.) Detection of object presence	

Release date: 2014-07-03 11:57 Date of issue: 2014-07-03 204533_eng.xml



Accessories

UB-PROG3 Programming unit

OMH-04

Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm

BF 18 Mounting flange, 18 mm

BF 18-F

Mounting flange with dead stop, 18 mm

BF 5-30

Universal mounting bracket for cylindrical sensors with a diameter of 5 ... 30 mm

UVW90-K18 Ultrasonic -deflector

V15-G-2M-PVC Female cordset, M12, 5-pin, PVC cable

V15-W-2M-PUR

Female cordset, M12, 5-pin, PUR cable

Description of Sensor Functions

Programming procedure

The sensor features two switch outputs with one programmable switch point, each. Programming the switch points is done by applying the supply voltage -U_B (switch output 1) or +U_B (switch output 2) to the Teach-In input. The supply voltage must be applied to the Teach-In input for at least 1 s. LEDs indicate whether the sensor has recognized the target during the programming procedure.

Note:

Switching points may only be specified directly after Power on. A time lock secures the adjusted switching points against unintended modification 5 minutes after Power on. To modify the switching points later, the user may specify the desired values only after a new Power On.

Note:

If a programming adapter UB-PROG3 is used for the programming procedure, button A1 is assigned to -U_B and button A2 is assigned to +U_B.

Programming switch ouputs

Switch point for switch output 1

- 1. Place the target at the desired switch point position of switch output 1
- 2. Program the switch point by applying -U_B to the Teach-In input (corresponding yellow LED flashes)
- 3. Disconnect the Teach-In input from -U_B to save the switch point
- Switch point for switch output 2
- 1. Place the target at the desired switch point position of switch output 2
- 2. Program the switch point by applying +U_B to the Teach-In input (corresponding yellow LED flashes)
- 3. Disconnect the Teach-In input from $+U_B$ to save the switch point

Programming detection of object presence

- 1. Cover the sensor face with hand or remove all objects from sensing range
- 2. Apply -U_B to the Teach-In input (red LED flashes)
- 3. Disconnect the Teach-In input from $-U_B$
- 4. Apply $+U_B$ to the Teach-In input (red LED flashes)
- 5. Disconnect the Teach-In input from +UB

Note: Only one switch output can be configured for detection of presence of objects. If the sensor detects an object within the maximum detection range, the switch output switches.

Adjusting the sound cone characteristics:

The ultrasonic sensor enables two different shapes of the sound cone, a wide angle sound cone and a small angle sound cone.

1. Small angle sound cone

- switch off the power supply
- connect the Teach-In input wire to -UB
- switch on the power supply
- the red LED flashes once with a pause before the next.
- ÷Ř: 「 yellow LED: permanently on: indicates the presence of an object or disturbing object within the sensing range
- disconnect the Teach-In input wire from -U_B and the changing is saved

2. Wide angle sound cone

- switch off the power supply
- connect the Teach-In input wire with +UB
- switch on the power supply
- the red LED double-flashes with a long pause before the next. ٠
- yellow LED: permanently on: indicates an object or disturbing object within the sensing range
- disconnect the Teach-In input wire from +U_B and the changing is saved

Factory settings

See technical data.

Display

Date of issue: 2014-07-03 204533_eng.xml

2014-07-03 11:57

date:

Release

The sensor provides LEDs to indicate various conditions.

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.co



, ĐÓ: ,

3

pause



	Red LED	Yellow LED 1	Yellow LED 2
During Normal operation			
Proper operation	Off	Switching state	Switching state
		output 1	output 2
Interference (e.g. compressed air)	On	remains in previous	remains in previous
		state	state
Programming of output 1			
Object detected	Off	Flashes	Off
No object detected	Flashes	Off	Off
Object uncertain (programming invalid)	On	Off	Off
Programming of output 2			
Object detected	Off	Off	Flashes
No object detected	Flashes	Off	Off
Object uncertain (programming invalid)	On	Off	Off

Installation conditions

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF18, BF18-F or BF 5-30 must be used.

In case of direct mounting of the sensor in a through hole using the steel nuts, it has to be fixed at the middle of the housing thread. If a fixation at the front end of the threaded housing is required, plastic nuts with centering ring (accessories) must be used.

