	Technical data		
	General specifications		
	Sensing range	30 500 mm	
	Adjustment range	50 500 mm	
	Unusable area	0 30 mm	
	Standard target plate	100 mm x 100 mm	
	Transducer frequency	approx. 380 kHz	
	Response delay	approx. 50 ms	
	Indicators/operating means		
	LED yellow	indication of the switching state	
		flashing: program function object detected	
	LED red	"Error", object uncertain in program function: No object detected	
	Electrical specifications	in program function. No object detected	
	Operating voltage U <sub>B</sub>	10 30 V DC , ripple 10 % <sub>SS</sub>	
	No-load supply current $I_0$	≤ 50 mA	
	Input	2 00 m/A	
	Input type	1 program input,	
	pac ()po	operating range 1: -U <sub>B</sub> +1 V, operating range 2: +4 V	
		+U <sub>B</sub>	
		input impedance: > 4.7 k $\Omega$ ; program pulse: $\geq$ 1 s	
	Output		
odel Number	Output type	2 switch outputs NPN, normally open/closed	
	Rated operating current Ie	2 x 100 mA , short-circuit/overload protected	
B500-18GM75-E01-V15	Voltage drop U <sub>d</sub>	≤ 3 V	
ngle head system	Repeat accuracy	≤ 1 %	
ngio noud byotem	Switching frequency f	max. 8 Hz	
eatures	Range hysteresis H	1 % of the set operating distance	
eatures	Temperature influence	± 1.5 % of full-scale value	
2 switch outputs	Ambient conditions	-25 70 °C (-13 158 °F)	
Selectable sound lobe width	Ambient temperature Storage temperature	-25 70 °C (-13 158 °F) -40 85 °C (-40 185 °F)	
Selectable Sourio Iope Width	Mechanical specifications		
Program input	Connection type	Connector M12 x 1 , 5-pin	
	Degree of protection	IP65	
Temperature compensation	Material		
Very small unusable area	Housing	brass, nickel-plated	
-	Transducer	epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT	
iagrams	Mass	60 g	
	Factory settings		
haracteristic response curve	Output 1	Switching point: 50 mm output function: Switch point operation mode output behavior: NO contact	
tance Y [mm]	Output 2	Switching point: 500 mm	
0 [flat ourfood 100 mm u 100 mm	Odipul 2	output function: Switch point operation mode	
flat surface 100 mm x 100 mm		output behavior: NC contact	
	Beam width	wide	
	Compliance with standards and		
	directives		
	Standard conformity		
	Standards	EN 60947-5-2:2007	
		IEC 60947-5-2:2007	
	Approvals and certificates		
round bar, Ø 25 mm	UL approval	cULus Listed, General Purpose	
0 200 400 600 800 1000	CSA approval	cCSAus Listed, General Purpose	
Distance X [mm]	CCC approval	CCC approval / marking not required for products rated	
Υ¥		≤36 V	
→ X			
narrow sound lobe			

 Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

 Pepperl+Fuchs Group
 USA: +1 330 486 0001
 G

 www.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com


EPEPPERL+FUCHS

UB500-18GM75-E01-V15


1

# UB500-18GM75-E01-V15

## Dimensions

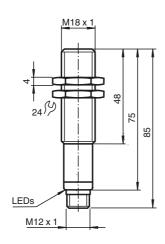

# **Electrical Connection**

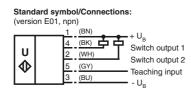

Core colours in accordance with EN 60947-5-2.

## **Pinout**



#### Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)
5	GY	(gray)

# **Additional Information**

# Programmed switching output function

Switch output 1 (N.O.)	Object range	
Switch output 2 (N.C.)		
Switch point 1 -> $\infty$ :	Switch output 1, (N.O.) Detection of object presence	
Switch point 2 -> $\infty$ :	Switch output 2, (N.C.) Detection of object presence	

Refer to "General Notes Relating to Pepperl+Fuchs Product Information". Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

## Accessories

**UB-PROG3** Programming unit

## **OMH-04**

Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm

**BF 18** Mounting flange, 18 mm

## **BF 18-F**

Mounting flange with dead stop, 18 mm

#### BF 5-30

Universal mounting bracket for cylindrical sensors with a diameter of 5 ... 30 mm

UVW90-K18 Ultrasonic -deflector

V15-G-2M-PVC Female cordset, M12, 5-pin, PVC cable

V15-W-2M-PUR

Female cordset, M12, 5-pin, PUR cable

# **Description of Sensor Functions**

#### Programming procedure

The sensor features two switch outputs with one programmable switch point, each. Programming the switch points is done by applying the supply voltage -U<sub>B</sub> (switch output 1) or +U<sub>B</sub> (switch output 2) to the Teach-In input. The supply voltage must be applied to the Teach-In input for at least 1 s. LEDs indicate whether the sensor has recognized the target during the programming procedure.

#### Note:

Switching points may only be specified directly after Power on. A time lock secures the adjusted switching points against unintended modification 5 minutes after Power on. To modify the switching points later, the user may specify the desired values only after a new Power On.

#### Note:

If a programming adapter UB-PROG3 is used for the programming procedure, button A1 is assigned to -U<sub>B</sub> and button A2 is assigned to +U<sub>B</sub>.

## Programming switch ouputs

#### Switch point for switch output 1

- 1. Place the target at the desired switch point position of switch output 1
- 2. Program the switch point by applying -U<sub>B</sub> to the Teach-In input (corresponding yellow LED flashes)
- 3. Disconnect the Teach-In input from -U<sub>B</sub> to save the switch point
- Switch point for switch output 2
- 1. Place the target at the desired switch point position of switch output 2
- 2. Program the switch point by applying +U<sub>B</sub> to the Teach-In input (corresponding yellow LED flashes)
- 3. Disconnect the Teach-In input from  $+U_B$  to save the switch point

## Programming detection of object presence

- 1. Cover the sensor face with hand or remove all objects from sensing range
- 2. Apply -U<sub>B</sub> to the Teach-In input (red LED flashes)
- 3. Disconnect the Teach-In input from  $-U_B$
- 4. Apply  $+U_B$  to the Teach-In input (red LED flashes)
- 5. Disconnect the Teach-In input from +UB

Note: Only one switch output can be configured for detection of presence of objects. If the sensor detects an object within the maximum detection range, the switch output switches.

#### Adjusting the sound cone characteristics:

The ultrasonic sensor enables two different shapes of the sound cone, a wide angle sound cone and a small angle sound cone.

#### 1. Small angle sound cone

- switch off the power supply
- connect the Teach-In input wire to -UB
- switch on the power supply
- the red LED flashes once with a pause before the next.
- ÷Ř: 「 yellow LED: permanently on: indicates the presence of an object or disturbing object within the sensing range
- disconnect the Teach-In input wire from -U<sub>B</sub> and the changing is saved

#### 2. Wide angle sound cone

- switch off the power supply
- connect the Teach-In input wire with +UB
- switch on the power supply
- the red LED double-flashes with a long pause before the next. ٠
- yellow LED: permanently on: indicates an object or disturbing object within the sensing range
- disconnect the Teach-In input wire from +U<sub>B</sub> and the changing is saved

# **Factory settings**

See technical data.

# Display

130226\_eng.xml

Date of issue: 2014-07-03

2014-07-03 11:57

date:

Release

The sensor provides LEDs to indicate various conditions.



pause

3

, ĐÓ: ,



	Red LED	Yellow LED 1	Yellow LED 2
During Normal operation			
Proper operation	Off	Switching state	Switching state
		output 1	output 2
Interference (e.g. compressed air)	On	remains in previous	remains in previous
		state	state
Programming of output 1			
Object detected	Off	Flashes	Off
No object detected	Flashes	Off	Off
Object uncertain (programming invalid)	On	Off	Off
Programming of output 2			
Object detected	Off	Off	Flashes
No object detected	Flashes	Off	Off
Object uncertain (programming invalid)	On	Off	Off

## Installation conditions

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF18, BF18-F or BF 5-30 must be used.

In case of direct mounting of the sensor in a through hole using the steel nuts, it has to be fixed at the middle of the housing thread. If a fixation at the front end of the threaded housing is required, plastic nuts with centering ring (accessories) must be used.

