100	Technical data	
	General specifications	0 250 mm
The state of the s	Sensing range Adjustment range	53 250 mm
(BATTER)	Standard target plate	20 mm x 20 mm
COST CONTRACT	Transducer frequency	approx. 400 kHz
28120 100	Nominal ratings	
and the second sec	Time delay before availability t _v	≤ 150 ms
3 113	Limit data	
	Permissible cable length	max. 300 m
	Indicators/operating means	autholicae at the condition to the la
	LED yellow Electrical specifications	switching state and flashing: Teach-In
	Rated operating voltage U _e	24 V DC
	Operating voltage U _B	20 30 V DC , ripple 10 % _{SS} ; 12 20 V DC sensitivity
	opolaring tonago oB	reduced to 90 %
	No-load supply current Io	≤ 20 mA
CE (SP [®] c (VL) ∪s	Input	
	Input type	1 program input
	Level	low level : 0 0.7 V (Teach-In active)
		high level : U _B or open input (Teach-In inactive)
Madel Newsbar	Input impedance	16 κΩ
Model Number	Pulse length	≥3 s
UBR250-F77-E0-V31	Output Output type	1 switch output E0, NPN, NO
•==••	Rated operating current I _e	200 mA, short-circuit/overload protected
Reflex ultrasonic sensor	Voltage drop U _d	≤2 V
	Switch-on delay t _{on}	≤ 50 ms
Features	Switching frequency f	10 Hz
Miniature design	Off-state current Ir	≤ 0.01 mA
•	Temperature influence	+ 0.17 %/K
 Program input 	Ambient conditions	
Degree of protection IP67	Ambient temperature	-25 70 °C (-13 158 °F)
	Storage temperature	-40 85 °C (-40 185 °F)
 Switching status indicator, yellow 	Shock resistance	30 g , 11 ms period
LED	Vibration resistance Mechanical specifications	10 55 Hz , Amplitude ± 1 mm
	Connection type	M8 x 1 connector, 4-pin
Diagrams	Degree of protection	IP67
	Material	
Characteristic response curve	Housing	Polycarbonate
•	Transducer	epoxy resin/hollow glass sphere mixture; polyurethane foa
Distance Y [mm]	Installation position	any position
40	Mass	10 g
30	Tightening torque, fastening screws	max. 0.2 Nm
	Compliance with standards and directives	
20	Standard conformity	
10	Standards	EN 60947-5-2:2007
0	otandardo	IEC 60947-5-2:2007
-10		
-20	Approvals and certificates	
-30		al II us Listed. Conserval Durmass
-40	UL approval	cULus Listed, General Purpose
	CSA approval	cCSAus Listed, General Purpose
0 50 100 150 200 250 300 Distance X [mm]	CCC approval	CCC approval / marking not required for products rated ≤36 V
Distance X [nin]		<u></u> ≤00 V
tΥ		
 _		

UBR250-F77-E0-V31

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com


Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com




UBR250-F77-E0-V31

Dimensions

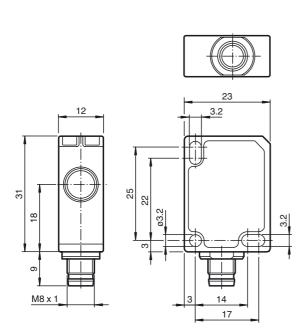

Electrical Connection

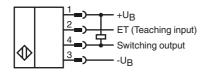

Pinout



Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)



Accessories

OMH-ML7-01 Mounting bracket

V31-GM-2M-PVC Female cordset, M8, 4-pin, PVC cable

V31-WM-2M-PVC

Female cordset, M8, 4-pin, PVC cable

UB-PROG4-V31 Programming unit for ultrasonic sensors with Teach-in input at pin 2

Description of Sensor Function

The ultrasonic sensor works like a retroreflective sensor. It transmits ultrasonic packages in quick succession and responds to their reflection off a reference object at a defined distance. The distance T to the reference object can be taught in. The sensor has a switch output. This output switches if the reference object is not detected, which happens when another object is located between the sensor and the reference object. The limit of the switching range is derived as follows: T - 5 %.

Notes

- The distance T of the reference object must not be changed during operation. If the distance T changes, it will have to be taught-in again.
- The reference object must not be removed during operation.

Teach-In the Distance to the Reference Object

Proceed as follows to teach in the distance T to the reference object:

- 1. Connect the sensor and turn on the operating voltage.
- 2. Place the reference object at the required distance.
- 3. Connect the teach-in input (ET) to $-U_B$. This can be done using the pushbutton or the controller.
- The LED will start flashing after 3 seconds to indicate that the sensor is ready to start the teach-in process (*)
- 4. Disconnect the teach-in input (ET) with -U_B. The distance T to the reference object has now been taught in ^(*).
- (*) If no object is detected within the sensing range of the sensor, the sensor will start flashing at a faster rate. The switching point remains unchanged.

Switching characteristics and display LED

Sensing range				Output	LED
	Adjustment range				
	Switching area	5%	Reference		
		of	object	-U _B	Off
	•	Т	(position T)	+U _B	On
•				+U _B	On

Object position

Safety Note

The use of this device in applications, where the safety of persons depends from the devices function, is not allowed!

Pepperl+Fuchs Group www.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

