	Technical data	
	General specifications	
Sug.	Sensing range	0 400 mm
APER.	Adjustment range	95 400 mm
Section and the section of the secti	Standard target plate	20 mm x 20 mm
12324142115948	Transducer frequency	approx. 300 kHz
48 8 4	Nominal ratings	
24 Martin Con	Time delay before availability t _v	≤ 150 ms
C C C C C C C C C C C C C C C C C C C	Limit data	
	Permissible cable length	max. 300 m
	Indicators/operating means	
	LED yellow	switching state and flashing: Teach-In
	Electrical specifications	24 V DC
	Rated operating voltage Ue	
	Operating voltage U _B	20 30 V DC , ripple 10 % _{SS} ; 12 20 V DC reduced
	No load outply ourront l	sensitivity by 90 % ≤ 20 mA
	No-load supply current I ₀ Input	S 20 IIIA
	Input type	1 program input
C US	Level	low level : 0 0.7 V (Teach-In active)
	20001	high level : U_B or open input (Teach-In inactive)
	Input impedance	16 kΩ
Model Number	Pulse length	≥3 s
	Output	
UBR400-F77-E2-V31	Output type	1 switch output PNP, NO
	Rated operating current Ie	200 mA, short-circuit/overload protected
Reflex ultrasonic sensor	Voltage drop U _d	≤2 V
	Switch-on delay ton	≤ 75 ms
Features	Switching frequency f	5 Hz
Miniature design	Off-state current Ir	≤ 0.01 mA
-	Temperature influence	+ 0.17 %/K
 Program input 	Ambient conditions	
. Distantion domina ID67	Ambient temperature	-25 70 °C (-13 158 °F)
Protection degree IP67	Storage temperature	-40 85 °C (-40 185 °F)
 Switching status indicator, yellow 	Shock resistance	30 g , 11 ms period
LED	Vibration resistance	10 55 Hz , Amplitude ± 1 mm
	Mechanical specifications	
Diagrams	Connection type	M8 x 1 connector , 4-pin
Diagrams	Protection degree	IP67
	Material	Delveerbenete
Characteristic response curve	Housing	Polycarbonate
Distance Y [mm]	Transducer Installation position	epoxy resin/hollow glass sphere mixture; polyurethane foam any position
	Mass	10 g
40	Tightening torque, fastening screws	max. 0.2 Nm
30	Compliance with standards and	11dX. 0.2 Mil
20	directives	
	Standard conformity	
0	Standards	EN 60947-5-2:2007
		IEC 60947-5-2:2007
-10		
-20	Approvals and certificates	
-30		alling Listed Oscient Dumana
-40	UL approval	cULus Listed, General Purpose
-50	CSA approval	cCSAus Listed, General Purpose
0 100 200 300 400 500 600	CCC approval	CCC approval / marking not required for products rated
Distance X [mm]		≤36 V
¥Υ		
r──∎ ^L → X		

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com




UBR400-F77-E2-V31

UBR400-F77-E2-V31

Dimensions

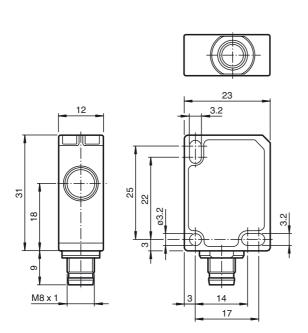

Electrical Connection

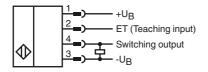

Pinout



Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)



2

Accessories

UB-PROG4-V31

Programming unit for ultrasonic sensors with Teach-in input at pin 2

OMH-ML7-01 Mounting bracket

V31-GM-2M-PVC

Female cordset, M8, 4-pin, PVC cable

V31-WM-2M-PVC

Female cordset, M8, 4-pin, PVC cable

Description of Sensor Function

The ultrasonic sensor works like a retroreflective sensor. It transmits ultrasonic packages in quick succession and responds to their reflection off a reference object at a defined distance. The distance T to the reference object can be taught in. The sensor has a switch output. This output switches if the reference object is not detected, which happens when another object is located between the sensor and the reference object. The limit of the switching range is derived as follows: T - 5 %.

Notes

- The distance T of the reference object must not be changed during operation. If the distance T changes, it will have to be taught-in again.
- The reference object must not be removed during operation.

Teach-In the Distance to the Reference Object

Proceed as follows to teach in the distance T to the reference object:

- 1. Connect the sensor and turn on the operating voltage.
- 2. Place the reference object at the required distance.
- 3. Connect the teach-in input (ET) to $-U_B$. This can be done using the pushbutton or the controller.
- The LED will start flashing after 3 seconds to indicate that the sensor is ready to start the teach-in process (*)
- 4. Disconnect the teach-in input (ET) with -U_B. The distance T to the reference object has now been taught in ^(*).
- (*) If no object is detected within the sensing range of the sensor, the sensor will start flashing at a faster rate. The switching point remains unchanged.

Switching characteristics and display LED

Sensing range				Output	LED
	Adjustment range				
	Switching area	5%	Reference		
		of	object	-U _B	Off
	•	Т	(position T)	+U _B	On
•				+U _B	On

Object position

Mounting instruction

If the sensor is operated at temperatures below 0 °C, use the supplied distance plate. Only use the two rearmost mounting holes (located opposite to the transducer) for mounting the sensor.

Safety Note

The use of this device in applications, where the safety of persons depends from the devices function, is not allowed!

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

