

CE ECOLAB

Model number


VAA-4E4A-G11-ZAJ/EA2L-V1

G11 module 4 inputs and 4 outputs

Features


- Inputs for 2-, 3-, and 4-wire sensors •
- Power supply of outputs from the ex-• ternal auxiliary voltage
- Supply of sensors from AS-Interface •
- Function display for bus, external au-. xiliary voltage, in- and outputs
- Red LED per channel, lights up in the • event of output overload
- Communication monitoring .
- Switchable lead breakage detection . (outputs)
- Protection degree IP68/IP69K •
- **AS-Interface POWER24**

Dimensions

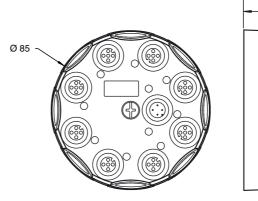


46 35

Electrical connection

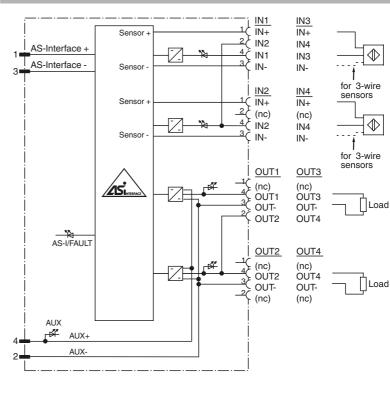

Indicating / Operating means

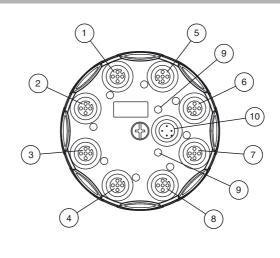



党

 \diamondsuit

4-wire

sensors





(10)

AS-i/AUX connection

Date of issue: 2013-12-12 224941_eng.xml Release date: 2013-12-12 13:57

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

EPPPERL+FUCHS

1

AS-Interface sensor/actuator module

Technical data		
Technical data		
General specifications Slave type	Standard slave	
AS-Interface specification	V3.0	
Required master specification	≥ V2.1	
UL File Number	E87056	
	287030	
	Otatus display multi salaya	
LED AS-i/FAULT	Status display; multi-colour l Green: normal operation	ED
	Red: communication fault	
	Flashing yellow/red: address	
		supply i.e. overload or lead interrup-
	tion outputs	
LED AUX	ext. auxiliary voltage U _{AUX} ; o green: voltage OK	dual LED green/red
	red: reverse voltage	
LED IN	switching state (input); 4 LEI	D vellow
LED OUT	switching state (output); 4 Ll	,
	yellow: output active	
	red: output overload or lead	interruption
Electrical specifications		
Auxiliary voltage (output) U _{AU}	X 20 30 V DC PELV	
Rated operating voltage Ue	18,0 31.6 V from AS-Inter	face
Rated operating current Ie	\leq 40 mA (without sensors) /	max. 240 mA
Protection class	III	
Surge protection		gory III, safe isolated power supplies
	(PELV)	
Input		
Number/Type	4 inputs for 2- or 3-wire sense	
	option 2 inputs for 4-wire ser	nsors (PNP), DC
Supply	from AS-Interface	
Voltage	12 31 V	
Current loading capacity	\leq 200 mA, overload and sho	rt-circuit protected
Input current	\leq 9 mA (limited internally)	
Switching point	according to DIN EN 61131	-2 (Type 2)
0 (unattenuated)	≤3 mA	
1 (attenuated)	≥5 mA	
Signal delay	< 1 ms (input/AS-Interface)	
Output		
Number/Type	4 electronic outputs, PNP, or	verload and short-circuit proof
Supply	from external auxiliary voltag	ge U _{AUX}
Current	2 A per output	
	TB \leq 40 °C: 6 A total	
Veltage		max. 2 A, sum O3 + O4 max. 2 A
Voltage	≥ (U _{AUX} - 0.5 V)	
Electrical isolation		
Input/Output	safe isolation, rated insulation	_
Output/AS-Interface	safe isolation, rated insulation	on voltage 40 V DC
Programming instructions		
Profile	S-7.F	
IO code	7	
ID code	F	
ID1 code	F	
ID2 code	E	
Data bits (function via AS-Interface)	input	output
D0	IN1	01
D1	IN2	02
D2	IN3	O3
D3	IN4	O4
Parameter bits (programmable via AS-	,	
P0	Communication monitoring	
	P0 = 0 monitoring = off, the off munication fails	outputs maintain the status if com-
		f communication fails, the outputs
	are deenergised (basic setti	
P1	Input filter	
	P1 = 0 input filter on, pulse s	
20	P1 = 1 input filter off (basic s	setting)
P2	Lead breakage outputs	
	P2 = 0 lead breakage on P2 = 1 lead breakage off (ba	asic setting)
P3	not used	
Ambient conditions		
	-25 70 °C (-12 159 °E)	
Ambient temperature	-25 70 °C (-13 158 °F)	
Storage temperature Shock and impact resistance	-25 85 °C (-13 185 °F) 30 g, 11 ms in 6 spatial dired	tions 3 shocks
Shock and impact resistance	30 g, 11 ms in 6 spatial direct $10 g$, 16 ms in 6 spatial direct	
Vibration resistance	0.75 mm 10 57 Hz , 5 g 5	
Mechanical specifications		··· , ···

Function

The V*A-4E4A-G11-ZAJ/EA2L-V1 is an AS-Interface I/O module with 4 inputs and 4 outputs. 2, 3 and 4 wire sensors can also be connected as mechanical contacts to the 4 sourcing electronic inputs. The 4 electronic butputs are overload and short-circuit protected.

The housing with a central screw enables fast mounting on the base plate.

Connection to the AS-Interface cable, to the external power supply and to the sensors/actuators is via M12x1 plug-in connections on the top side of the device.

The inputs and the connected sensors are powered by the internal supply of the module (from the AS-Interface). The outputs and the connected actuators are powered by an external voltage source (AUX).

The current switching state of each input and butput is indicated via an IN or OUT LED. The DUT LED also indicates an overload or a lead breakage at the associated output. The AS-/FAULT LED indicates the status of the ASnterface (normal operation, communication error, peripheral fault, address 0). The AUX LED indicates the external power supply. The /O module is compatible with AS-Interface POWER24.

Note:

The device is equipped with a communication nonitor, which deactivates the outputs if the AS-Interface does not communicate with the nodule for more than 40 ms. The communication monitor can be deactivated via the parameter P0. Filters that suppress pulses with a duration of 2 ms or less at the inputs can be connected via the parameter P1.

Parameter P2 activates a lead breakage detection system for the outputs. This function detects and reports a missing load, providing the relevant output is deactivated. The associated OUT LED and the 'peripheral fault' function display the signal transmitted to the AS-Interface master. An overload of the input supply or the outputs is also reported to the AS-Interface master via the 'peripheral fault' function. Communication via the AS-Interface remains established even if a peripheral fault is set.

Accessories

VBP-HH1-V3.0-KIT AS-Interface Handheld with accessory

VAZ-V1-B3 Blind plug for M12 sockets

VBP-HH1-V3.0 AS-Interface Handheld

VAZ-PK-1,5M-V1-G Adapter cable module/hand-held programming device

VAZ-V1-B Blind plug for M12 sockets

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"
Pepperl+Fuchs Group USA: +1 330 486 0001 G

www.pepperl-fuchs.com

2

USA: +1 330 486 0001 Germany: +49 621 776 4411 fa-info@us.pepperl-fuchs.com fa-info@de.pepperl-fuchs.com



VAA-4E4A-G11-ZAJ/EA2L-V1


	Protection degree	IP68 / IP69K	
	Connection	AS-Interface/U _{AUX} : M12 round connector Inputs/outputs: M12 round connector	
	Material		
	Housing	PBT PC	
	Mounting screw	Stainless steel 1.4305 / AISI 303	
	Mass	200 g	
	Mounting	Mounting base	
Compliance with standards and directi- ves			
	Directive conformity		
	EMC Directive 2004/108/EC	EN 61000-6-2:2005, EN 61000-6-4:2007, EN 50295:1999	
	Standard conformity		
	Noise immunity	EN 61000-6-2:2005, EN 61326-1:2006, EN 50295:1999	
	Emitted interference	EN 61000-6-4:2007	
	Input	EN 61131-2:2007	
	Protection degree	EN 60529:2000	
	Fieldbus standard	EN 50295:1999, IEC 62026-2:2006	

Notes

Do not connect inputs and outputs, which are supplied via the module from AS-interface or via auxiliary power, with power supply and signal circuits with external potentials.

Mounting instructions

Screw the device onto a level mounting surface using two M5 attachment screws. The attachement screws are not included.

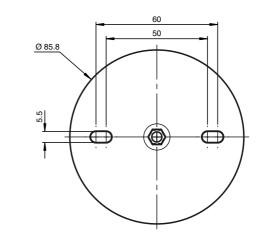

Screw a blind plug onto spare connections to ensure the protection category.

 Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

 Pepperl+Fuchs Group
 USA: +1 330 486 0001
 G

www.pepperl-fuchs.com fa-info@us.peppe

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

