


 ϵ **SqfeBox**



Dimensions

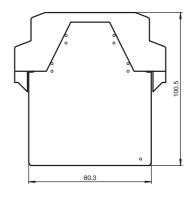

9 10 11 12	5 6 7 8	22.6
9	9	

Model Number

SB4 Module 4CG/165

Safety control unit module Module for Evaluation unit SafeBox - series SB4


Features

- Sensor module
- 4 sensor channels
- Single module for safety thru-beam sensors SLA12 and SLA29 and for 2 channel safety devices (emergency
- Micro-Controller controls
- Operating mode can be selected by means of DIP switches
- Connection of a number of separate de-energizing circuits
- Screw terminals or spring terminals

Electrical connection

		=	$\overline{}$
9	0	9	9
Ø	0	0	Ø
13	14	15	16
	10		
₹	¥Ε	34	
*	ξF	33	
₹	ķΕ	32	
⋠	¥Ε	R1	
1	2	3	4
5	6	7	8
Ø	Ø	Ø	Ø
Ø	0	Ø	Ø
Ě	÷	_	_

Terminal	Function	Channel assignment	
1	Receiver 2 input	Input	
2	Receiver 2 +U		Channel 2
3	Transmitter 2 +U		
4	Transmitter 2 output	Output	
5	Receiver 1 input	Input	
6	Receiver 1 +U		Channel
7	Transmitter 1 +U		
8	Transmitter 1 output	Output	
9	Transmitter 3 output	Output	
10	Transmitter 3 +U		Channel
11	Receiver 3 +U		
12	Receiver 3 input	Input	
13	Transmitter 4 output	Output	
14	Transmitter 4 +U		Channel
15	Receiver 4 +U		
16	Receiver 4 input	Input	

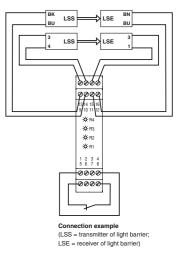

Technical data

General	specifications
General	specifications

Operating mode simultaneousness, antivalence

Functional safety related parameters

Safety Integrity Level (SIL)	SIL 3
Performance level (PL)	PL e
Category	Cat. 4
Mission Time (T _M)	20 a
Type	4

Indicators/operating means

Function display	LED yellow (4x): indicator lamp channel 1 4
Pre-fault indication	LED yellow flashing: Indicator lamp channel 1 4
Controls	DIP-switch

Electrical specifications

Operating voltage U_{B} 24 V DC \pm 20 % , via SB4 Housing

Input

Activation current approx. 7 mA

Ambient conditions

0 ... 50 °C (32 ... 122 °F) Ambient temperature Storage temperature -20 ... 70 °C (-4 ... 158 °F)

Mechanical specifications

Protection degree Cage tension spring terminals , Cable cross-section 0.2 ... $1.5 \ \text{mm}^2$ Connection

Material

Housing Polyamide (PA) Mass approx. 150 g

Accessories

SB4 Cape

cover sheet

SB4 Housing 2

Empty housing for Evaluation unit SB4

SB4 Housing 3

Empty housing for Evaluation unit SB4

SB4 Housing 4

Empty housing for Evaluation unit SB4

SB4 Housing 5

Empty housing for Evaluation unit SB4

SB4 Housing 6

Empty housing for Evaluation unit SB4

SB4 Housing 8

Empty housing for Evaluation unit SB4

USA: +1 330 486 0001

fa-info@us.pepperl-fuchs.com

Compliance with standards and directi-

Standard conformity	(extract)
Standards	EN IEC 61496-1 EN IEC 61508 EN ISO 13849-1
Approvals and certificates	
SIL classification	up to SIL3 acc. to IEC 61508 tested and certified by TÜV SÜD according to: IEC 61508:1998 part 1, 3.4 IEC 61508: 2000 ISO 13849-1:2006 EN 50178:1997 IEC 61496-1:2004 IEC 61496-2:2006
UL approval	cULus
TÜV approval	TÜV

The operation of this module is only possible within an interface device Type SB4 SafeBox.

The operating instruction for the SafeBox must be followed.

Function

The 4-channel sensor card module SB4-4CG facilitates the connection of light barriers or light grids and safety sensors with contacts in a single or two-channel version. It also contains the microcontroller control system for the SafeBox. Only one of these modules is contained in a SafeBox SB4 and it must be plugged-in at position 2.

There is a plug-in jumper on the module. If the system contains additional assemblies, then this plug-in jumper must be pluggedin to the last plug-in position.

This module enables a number of separate trip circuits to be installed in one SafeBox.

On switching on the system the software determines whether a light barrier or a safety sensor with contacts is connected on a channel and then monitors its presence during operation.

Safety sensors with contacts, which are connected to the SafeBox, must operate in accordance with the normally-closed principle. An open contact signifies a "Safe condition".


Channels 1 and 2 and 3 and 4 can be monitored for concurrence and antivalence. During activated concurrence monitoring 2channel safety devices are monitored for simultaneous opening and changeover of the signals. The monitoring is carried out over a period of 2 s.

Antivalence monitoring awaits the normally-closed contact on channel 1 or channel 3 and the normally-open contact on channel 2 or 4. If the antivalence monitoring is operated without concurrence monitoring, then an incorrect contact setting leads to switch off and error signal 7 after approx. 60 s.

Operating modes

The assembly comprises 4 DIP switches for selecting the concurrence of neighbouring channels (1 and 2, 3 and 4) and antivalence evaluation of neighbouring channels (1 and 2, 3 and 4). Function selection always involves the actuation of 2 switches. The functions are not effective with light barriers connected.

Position of the DIP switches

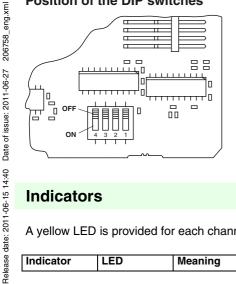

Switch	Position	Operating mode
1 and 3	OFF	No antivalent evaluation
	ON	Antivalent evaluation active
2 and 4	OFF	No concurrence eval- uation
	ON	Concurrence evaluation active

Indicators

A yellow LED is provided for each channel on the front panel of the module.

Indicator LED Meaning

Pepperl+Fuchs Group

R1 - R4	Yellow	Status light barrier 1 4
		Off: Broken On: Light beam free
		Flashing: Light beam free, stability control inadequate (Frequency approx. 2.5 Hz)
		Fast flashing: Fault (Frequency approx. 5 Hz)

Germany: +49 621 776-4411 fa-info@pepperl-fuchs.com